




BKK-CENTRIC OFF SET BUSHING INSTALLATION RECOMMENDATION AND SUGGESTIONS



BKK-CENTRIC off set bushing is a inexpensive way to gain positive camber in situations when your lowering project goes beyond the limits of the DJM Suspension upper control arm. It is vary important that the bushings do not rotate. This is how we do the installation, you may have a different or even better way. But, this is how we do it.

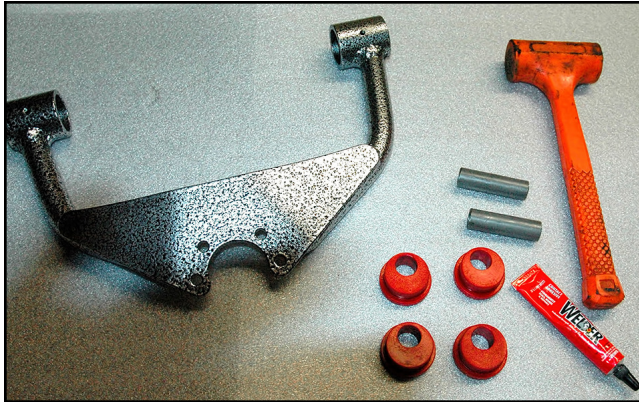

First you need to remove your centered bushings and sleeves. You will reuse the sleeves. Make sure you have a dead blow hammer on hand and get everything very clean.



You can get Welder at E-Bay or Amazon.com or other retail outlets. You get two tubes for around \$6.00 and it has so many uses you will keep buying it.



Second a small amount of Welder goes and long way so you don't need much. Put a thin coat on both the bushing and control arms. Let is set up about 10 minutes and press the bushing in. You can do this by hand or a little pressure with the mallet.



Make sure your holes are lined up and gently tap in the sleeves. Let it dry over night. Install with the supplied cam locks in you control arms kit and do not over tighten follow the instructions that came with the control arms.

tech@djmsuspension.com