



2017 PRODUCT CATALOG




Fast Definitions of Catalog Prefixes

Discount Code	Price Code to apply your discount
ACC	<i>Pinion Shim Kits (for rear axle w/ leaf spring)</i>
ASB	<i>Anti Sway-Bars</i>
BK	<i>Replacement Bushing Kits (Control Arms)</i>
CA	<i>CALMAX Control Arms</i>
CB	<i>Carrier Bearing Shim Kits</i>
CM	<i>Transmission Crossmembers</i>
CS	<i>Coil Springs</i>
DB	<i>Dream Beams (Ford I-Beams)</i>
DJM	<i>Complete DJM lowering Kits</i>
DS	<i>Drop Spindles</i>
EH	<i>Leaf Spring Eye Hangers</i>
EL	<i>End Links (for anti sway-bars)</i>
FK	<i>Complete Flip Kits</i>
HS	<i>Hanger / Shackle Kits (leaf spring rear ends)</i>
K	<i>One box complete kits</i>
LB	<i>Aluminum Lowering Block Kits</i>
RK	<i>Complete Rear Kits</i>
SB	<i>Steel Lowering Block Kits</i>
SE	<i>Shock Extenders</i>
SH	<i>Leaf Spring Shackle Kits</i>
TB	<i>Torsion Bar Kits</i>

Table of Contents

Chevy	3
Ford	16
Dodge	24
Toyota	27
Mini Trucks	30
Individual Parts	32
Accessories	42
Calmax SuperShocks	43

Scan this with your smart phone and go to djmsuspension.com

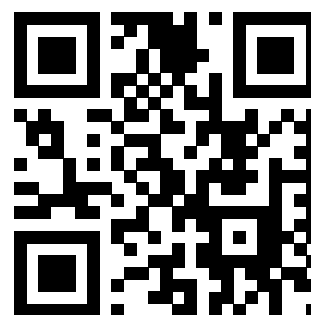

P.S. you'll need a free app on your phone
it's easy!



Maybe this is where it all started. Modern truck customizing goes back a long way and Chevy's have been one of the most popular trucks for you, the customizers. Here you can find more ways to lower your Chevy/GMC than anywhere else. We've spent over 20 years building parts and finding the best way to get your truck down to the stance that makes you proud to drive around. Let's take a look at the choices!

COMPLETE DJM KITS



You can build a radical engine by combining parts made by different manufactures, but you really have know what you're doing! The same thing is true when it comes to suspension parts!

There are more suspension parts for a Chevy than you can shake a stick at. With that thought, keep in mind advanced installers and experienced shops have done enough suspension work to know which parts you can combine without bad side effects to get *"the look"*. And really, their knowledge came from doing it wrong sometime in the past. So if you want to do your own work and you're not an expert, seriously consider buying a complete suspension kit. The parts in kits are designed to work together in an optimum way, with out nasty surprises. You won't have to buy any more parts to finish your job (suspension that is) and get to driving around! While it is fun to fool around in the garage, it's more fun to drive!



CHEVY

CALMAX Control Arms



Seamless DOM tubular construction makes CALMAX Control Arms strong, with durable powder coating finish they are attractive and tough. All steel ball joints installed with urethane bushings and drops from 2" all the way to 5" using factory coils. Calmax arms are the professional choice. Learn more about Calmax Control Arms at www.djmsuspension.com

DJM Dropped Spindles



Manufactured from high quality ductile iron and machined by computer controlled mills. "Without a doubt the toughest spindle in the aftermarket business" is how the magazines described DJM dropped spindles, and we of course agree. Find out more to see if a drop spindle is the right part for you at www.djmsuspension.com

Coil Springs



Coil Springs are special, their dynamic, while other parts may pivot one way or another, coil springs actually are compressed to a shorter length and expand beyond their static length, and are responsible for setting the ride height of your truck! Are coil springs important? You bet, sometimes the stock coil springs are your best choice, sometimes engineered lowering coils are all you need! Learn more about how coil springs work at www.djmsuspension.com

Torsion Bar Keys



On trucks that have torsion bars instead of coils springs you can lower by changing the "key" the torsion bar seats in. The lowering key re-indexes where the designed load of the torsion bar sets. Learn more about how torsion bars can be lowered at www.djmsuspension.com.

Flip Kits



Being able to move the rear axle from the bottom of a leaf spring to the top is called a flip kit. Actually nothing is "flipped" just moved, and this gives you from 4" to 8" of drop. It all depends on the thickness of the leaf spring pack. For the deep drop this is the ticket, you get more drop and better performance this way than say a lowered leaf. Learn more about flip kits and if this would be your best choice at www.djmsuspension.com

Hanger & Shackle Kits



For modest rear drops you should consider kits that are called Hanger and Shackle Kits, they move where the leaf spring mounts to the frame up towards the bed. This pulls the rear axle up or drops the rear of your truck. Unlike a flip kit, you don't move the rear axle relative to the leaf spring. You typically get from 3" to 5" of drop with these kits. Learn more about hanger and shackle kits at www.djmsuspension.com

Rear Kits



The new trucks and SUVs have made changes in their rear suspensions, coils spring rears, welded on leaf spring hangers, box designed frames, etc. We've designed "Rear Kits" hybrid type kits using parts from all the traditional ways of lowering to give you options when it comes to lowering the new, modern rigs being built today. They could have coil springs, shock extenders, frame C-sections, axle brackets, lowering blocks, trailing arm brackets and more. What ever you need! You can learn more about custom rear kits by going to www.djmsuspension.com

CALMAX Anti-Swaybars



Get rid of that traction-robbing body lean, have more confidence on long sweeping corners, as well as in emergency maneuvers. That's what Calmax Anti-Swaybars do! There's no reason why your truck can't handle like a sports car, lets call it a sports truck!

We all know that trucks weren't designed to be fast and handle from the factory, you can change it and here's a good place to start. Find out more benefits of a swaybar upgrade at www.djmsuspension.com

Universal Lowering Blocks



Commonly known as "Universal Lowering Blocks", these babies will fit any truck with 2 1/2" wide leaf springs with the axle on top of the leaf springs. The cast aluminum blocks are made in 2", 3" and 4" flavors with the 4" blocks sporting a

built in pinion correction angle. All steel blocks also have a 1" kit. They are placed between your axle and the leaf spring and it lowers your truck by spacing your axle up towards the bottom of your truck. All Universal Lowering Block kits come complete with high strength U-bolts with rolled threads, lock washers and nuts. See more information at www.djmsuspension.com

CALMAX SuperShocks



Performance and safety are very good reasons to have the best shocks you can buy. Not the most expensive, just the best. Having the correct shock length combined with proper valving make

Calmax SuperShocks the best choice for lowered trucks and SUV's. They make pretty good factory replacement shocks as well! Learn more about the how and why of shocks at www.djmsuspension.com





CHEVY

Astro/Safari 1982-1995 Composite Rear Leaf Spring

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM1027-2/3	CS2371-2	FK1027-3	1315 / 1900	462.93 / 694.22

Astro/Safari 1995-2000 All Steel Rear Leaf Spring

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM1027-2/3	CS2371-2	FK1027-97	1315 / 1900	462.93 / 694.22

Avalanche 2001 - 2006

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	DJM2000-0/2	NA	CS2000R-2 SE2000	Factory	271.93
2" Front / 2" Rear	DJM2000-2/2	TB2000A	CS2000R-2 SE2000	Factory	352.91
2" Front / 3" Rear	DJM2000-2/3	TB2000A	CS2000R-3 SE2000	Factory / 2000	352.91 / 468.56
3" Front / 3" Rear	DJM2000-3/3	CA2001L-3D CA2001L-3P	CS2000R-3 RK2000	1315 / 2000	805.88 / 1037.17
3" Front / 5" Rear	DJM2000-3/5	CA2001L-3D CA2001L-3P	CS2000R-5 RK2000	1315 / 1800	805.88 / 1037.17
Calmax Anti-Sway Bars					Discount Code
<i>Performance Parts</i>	ASB2001F	1.375" Tubular Front Bar			257.25
<i>Performance Parts</i>	ASB2001R	1.13" Solid Rear Bar			225.75

Avalanche 2007 - 2014

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	DJM2007-0/2	NA	CS2007R-2 SE2007	Factory	271.93
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory	455.63
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2000	577.17 / 692.82
2" Front / 3" Rear	DJM2007-2/3	CA2007L-2	CS2007R-3 RK2007	Factory / 2000	798.59 / 914.24
2" Front / 4" Rear	DJM2007-2/4	CA2007L-2	RK2007-4	Factory / 2000	798.59 / 914.24
3" Front / 4" Rear	DJM2007-3/4	CA2007-3	RK2007-4	Factory / 2000	922.64 / 1038.29
Calmax Anti-Sway bars					Discount Code
<i>Performance Parts</i>	ASB2007F	1.5" Tubular Front Bar			257.25
<i>Performance Parts</i>	ASB2001R	1.13" Solid Rear Bar			225.75



C-10 1963 - 1972 With Coil Spring Rear

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2354-2/3	CS3253-2	CS2354R-3	1309 / 1800	381.81 / 613.10
2" Front / 4" Rear	DJM2354-3/4	CS2353-3	CS2354R-4	1309 / 1800	381.81 / 613.10
2" Front / 4" Rear	DJM2355-3/4	CA2355L-3 (drum brakes)	CS2354R-4	1409 / 1800	740.76 / 972.05
5" Front / 5" Rear	DJM2355-5/5	CA2355L-3 CS2353-2	CS2354R-4 LB63LK	1309 / 1800	995.32 / 1226.61
5" Front / 5" Rear	DJM2355-5/5+	CA2355L-3 + CA2355U CS2353-2	CS2354R-4 LB63LK	1309 / 1800	1205.26 / 1436.55

C-10 1968 - 1972 With 2.25" Rear Leaf Spring

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1012C-2	1409 / 2000	92.55 / 323.84
3" Front / 5" Rear	DJM1012-3/5	CS2353-3	FK1012-5	1309 / 2100	358.74 / 590.03
3" Front / 5" Rear	DJM1055-3/5	CA2355L-3 (drum brakes)	FK1012-5	1409 / 2100	717.61 / 948.90
3" Front / 5" Rear	DJM1056-3/5	CA2356L-3 (disc brakes)	FK1012-5	1409 / 2100	717.61 / 948.90
5" Front / 5" Rear	DJM1055-5/5	CA2355L-3 + CS2353-2 (drum brakes)	FK1012-5	1309 / 2100	902.77 / 1134.06
5" Front / 5" Rear	DJM1056-5/5	CA2356L-3 + CS2353-2 (disc brakes)	FK1012-5	1309 / 2100	902.77 / 1134.06

C-10 1971 - 1972 With Disc Brake front & Coil Spring Rear

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2354-2/3	CS2353-2	CS2354R-3	1409 / 1800	381.89 / 613.18
3" Front / 4" Rear	DJM2354-3/4	CS2353-3	CS2354R-4	1309 / 1800	381.89 / 613.18
3" Front / 4" Rear	DJM2356-3/4	CA2356L-3	CS2354R-4	1409 / 1800	740.76 / 972.05
5" Front / 5" Rear	DJM2356-5/5	CA2356L-3 CS2353-2	CS2354R-4 LB63LK	1309 / 1800	995.32 / 1226.61
5" Front / 5" Rear	DJM2356-5/5+	CA2356L-3 + CA2356U CS2353-2	CS2354R-4 LB63LK	1309 / 1800	1205.26 / 1436.55

C-10 1973 - 1987

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1012-2	1409 / 2400	57.82 / 289.11
2" Front / 4" Rear	DJM1120-2/4	CS2353-2	HS1120-4	1309 / 2200	428.14 / 659.43
3" Front / 4" Rear	DJM1120-3/4	CS2353-3	HS1120-4	1309 / 2200	428.14 / 659.43
3" Front / 4" Rear	DJM2045L-3/4	DS2045L-3 (1" rotor)	HS1120-4	1409 / 2200	568.49 / 799.78
3" Front / 4" Rear	DJM2045H-3/4	DS2045H-3 (1.25" rotor)	HS1120-4	1409 / 2200	568.49 / 799.78



CHEVY

C-10 1973 - 1987

3" Front / 4" Rear	DJM2456-3/4	CA2356L-3	HS1120-4	1409 / 2200	787.01 / 1018.30
3" Front / 5" Rear	DJM2353-3/5	CS2353-3	FK1024-5	1309 / 2100	300.86 / 532.15
3" Front/5" Rear	DJM2353-3/5 LTD	CS2353-3	FK1024-LTD	1309/2100	368.55 / 599.83
3" Front / 5" Rear	DJM2045L-3/5	DS2045L-3 (1" rotor)	FK1024-5	1409 / 2100	441.21 / 672.50
3" Front / 5" Rear	DJM2045L-3/5 LTD	DS2045L-3 (1" rotor)	FK1024-LTD	1409 / 2100	502.22 / 733.51
3" Front / 5" Rear	DJM2045H-3/5	DS2045H-3 (1.25" rotor)	FK1024-5	1409 / 2100	441.21 / 672.50
3" Front / 5" Rear	DJM2045H-3/5 LTD	DS2045H-3 (1.25" rotor)	FK1024-LTD	1409 / 2100	502.22 / 733.51
3" Front / 5" Rear	DJM2456-3/5	CA2356L-3	FK1024-5	1409 / 2100	659.73 / 891.02
3" Front / 5" Rear	DJM2456-3/5 LTD	CA2356L-3	FK1024-LTD	1409 / 2100	710.33 / 941.62
5" Front / 5" Rear	DJM2045L-5/5	DS2045L-3 (1" rotor) CS2353-2	FK1024-5	1309 / 2100	626.37 / 857.66
5" Front / 5" Rear	DJM2045L-5/5 LTD	DS2045L-3 (1" rotor) CS2353-2	FK1024-LTD	1309 / 2100	678.56 / 909.85
5" Front / 5" Rear	DJM2045H-5/5	DS2045H-3 (1.25" rotor) CS2353-2	FK1024-5	1309 / 2100	626.37 / 857.66
5" Front / 5" Rear	DJM2045H-5/5 LTD	DS2045H-3 (1.25" rotor) CS2353-2	FK1024-LTD	1309 / 2100	678.56 / 909.85
5" Front / 5" Rear	DJM2456-5/5	CA2356L-3 CS2353-2	FK1024-5	1309 / 2100	844.88 / 1076.17
5" Front / 5" Rear	DJM2456-5/5 LTD	CA2356L-3 CS2353-2	FK1024-LTD	1309 / 2100	886.67 / 1117.96
5" Front / 5" Rear	DJM2456-5/5+	CA2356L-3+CA2356U CS2353-2	FK1024-5	1309 / 2100	1054.83 / 1286.12
5" Front / 5" Rear	DJM2456-5/5+LTD	CA2356L-3+CA2356U CS2353-2	FK1024-LTD	1309 / 2100	1086.62 / 1317.91

C20 / C30 1973 - 1991 8 - Lug Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM2655-3/4	CA2655L-3	HS1119-4	1409 / 1800	821.73 / 1053.02

C2500 / C3500 1992 - 1999 8 - Lug Trucks


Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1011-2	1415 / 2400	57.82 / 289.11
2" Front / 4" Rear	DJM2352-2/4	CS2352-2	HS2699-4	1315 / 2200	358.68 / 589.97
3" Front / 4" Rear	DJM2057-3/4	DS2057-3	HS2699-4	1315 / 2200	648.08 / 879.37
5" Front / 7" Rear	DJM2057-5/7	DS2057-3 CS2352-2	FK1026-7	1315 / 2200 +2000	879.61 / 1110.90



Heavy Duty 1500 2001 - 2010

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 5" Rear	DJMEH2602-3/5	CA2602L-3D CA2602L-3P	HS2602-5	1415 / 2200 + 2400	920.56 / 1151.85
6" Front / 8" Rear	DJM2699-6/8	CA2699L-6D CA2699L-6P CA2699U	FK2699-8 CM2699	1415 / 1700 +1800	1625.69 / 1856.98

The HD Series from Chevy have different leaf spring eye hangers depending on the model
Whats important here is you have a 1500 HD and your eye hanger bracket looks like this

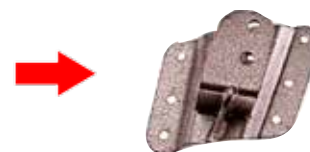

Heavy Duty 2500 / 3500 2001 - 2010 Long Bed Only

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 5" Rear	DJMEH2601-3/5	CA2602L-3D CA2602L-3P	HS2601-5	1415 / 2200 + 2400	920.56 / 1151.85
6" Front / 8" Rear	DJM2699-6/8	CA2699L-6D CA2699L-6P CA2699U	FK2699-8 CM2699	1415 / 1700+1800	1625.69 / 1856.98

The HD series from Chevy have different leaf spring eye hangers depending on the model
What's important here is you have a 2500 / 3500 LONG BED HD and your eye hanger bracket looks like this



Heavy Duty 2500 / 3500 2001 - 2010 Short Bed Only

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 5" Rear	DJMEH2603-3/5	CA2602L-3D CA2602L-3P	HS2603-5	1415 / 2200 + 2400	920.56 / 1151.85
6" Front / 8" Rear	DJM2699-6/8	CA2699L-6D CA2699L-6P CA2699U	FK2699-8 CM2699	1415 / 1700+1800	1625.69 / 1856.98

The HD series from Chevy have different leaf spring eye hangers depending on the model
What's important here is you have a 2500 / 3500 SHORT BED HD and your eye hanger bracket looks like this





CHEVY

Colorado / Canyon 2004 - 2011

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SB2400-2	Factory / 2100	92.54 / 208.19
2" Front / 3" Rear	DJM2400-2/3	CS2400-2	SB2400-3	Factory / 2100	219.82 / 335.47
3" Front / 4" Rear	DJM2400-3/4	CA2400L-3	SB2400-4	Factory / 2100	416.62 / 532.27

S-10 / S15 Pick Up 1982 -2004 S-10 Blazer / Jimmy 1982 - 1997

Note: For 1997 and newer S-10 Pick Ups/Blazers, etc. use part number LB1023-3 for 3" Block Kit, or LB1023-4 for 4" Block Kit

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	LB2LK	1315 / 2400	40.46 / 271.75
1" Front / 2" Rear	DJM2321-1/2	CS2321-2	LB2LK	1315 / 2400	167.74 / 399.03
2" Front / 3" Rear	DJM2321-2/3	CS2321-2	LB3LK	1315 / 2400	171.22 / 402.51
2" Front / 3" Rear	DJM2031-2/3	DS2031-2	LB3LK	1315 / 2400	261.51 / 492.80
3" Front / 4" Rear	DJM2321-3/4	CS2321-3	LB4LK	1315 / 2400	173.52 / 404.81
3" Front / 4" Rear	DJM2331-3/4	CA2331L-3	LB4LK	1315 / 2400	370.31 / 601.60
3" Front / 4" Rear	DJM2031-3/4	DS2031-2 CS2321-1	LB4LK	1315 / 2400	391.09 / 622.38
4" Front / 4" Rear	DJM2031-4/4	DS2031-2 CS2321-2	LB4LK	1315 / 2400	391.09 / 622.38

S-10 Blazer / Jimmy 1998 - 2003

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 2" Rear	DJM2321-2/2	CS2321-2	LB2LK / 1023-BP	1315 / 2400	167.74 / 399.03
3" Front / 3" Rear	DJM2321-3/3	CS2321-3	LB3LK / 1023-BP	1315 / 2400	171.22 / 402.51

C1500 Silverado / Sierra 1988 - 1991 *Standard Cab Only*

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM2351-2/4	CS2351-2	HS1121-4	1315 / 2200	318.17 / 549.46
2" Front / 4" Rear	DJM2351-V6	CS2351-V6	HS1121-4	1315 / 2200	318.17 / 549.46
2" Front / 4" Rear	DJM2555-2/4	CA2555L-2	HS1121-4	1415 / 2200	520.75 / 752.04
2" Front / 4" Rear	DJM2055-2/4	DS2055-2	HS1121-4	1415 / 2200	435.09 / 666.38
3" Front / 4" Rear	DJM2351-3/4	CS2351-3	HS1121-4	1315 / 2200	318.17 / 549.46
3" Front / 4" Rear	DJM2555-3/4	CA2555L-3	HS1121-4	1415 / 2200	520.75 / 752.04
4" Front / 6" Rear	DJM2555-4/6	CA2555L-4 CS2351-2	FK1025-6	1315 / 2000 + 2200	723.33 / 954.62
4" Front / 6" Rear	DJM2555-4/6+	CA2555L-4 + CA2555U CS2351-2	FK1025-6	1315 / 2000 + 2200	933.28 / 1164.57
4" Front / 6" Rear	DJM2055-4/6	DS2055-2 CS2351-2	FK1025-6	1315 / 2000 + 2200	637.68 / 868.97



C1500 Silverado / Sierra 1992 - 1998 All EXCEPT ... 88-91 Standard Cab

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM2351-2/4	CS2351-2	HS1121-4	1315 / 2200	318.17 / 549.46
3" Front / 4" Rear	DJM2555-2/4	CA2555L-2	HS1121-4	1415 / 2200	520.75 / 752.04
2" Front / 4" Rear	DJM2056-2/4	DS2056-2	HS1121-4	1415 / 2200	435.09 / 666.38
2" Front / 4" Rear	DJM2351-V6	CS2351-V6	HS1121-4	1315 / 2200	318.17 / 549.46
3" Front / 4" Rear	DJM2351-3/4	CS2351-3	HS1121-4	1315 / 2200	318.17 / 549.46
3" Front / 4" Rear	DJM2555-3/4	CA2555L-3	HS1121-4	1415 / 2200	520.75 / 752.04
4" Front / 6" Rear	DJM2555-4/6	CA2555L-4 CS2351-2	FK1025-6	1315 / 2000 + 2200	723.33 / 954.62
4" Front / 6" Rear	DJM2555-4/6+	CA2555L-4 + CA2555U CS2351-2	FK1025-6	1315 / 2000 + 2200	933.28 / 1164.57
4" Front / 6" Rear	DJM2056-4/6	DS2056-2 CS2351-2	FK1025-6	1315 / 2000 + 2200	637.68 / 868.97

Silverado / Sierra 1999 - 2006 2WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM2399-2/4	CS2599-2	HS2599-4	1415 / 1900 + 2000	393.41 / 624.70
2" Front / 4" Rear	DJM2599-2/4	CA2599L-2	HS2599-4	1415 / 1900 + 2000	648.09 / 879.38
3" Front / 4" Rear	DJM2599-3/4	CA2599L-3	HS2599-4	1415 / 1900 + 2000	648.09 / 879.38
3" Front / 5" Rear	DJM2599-3/5	CA2599L-3	FK2599-6 SH1099	1415 / 1900 + 2000	705.97 / 937.26
4" Front / 6" Rear	DJM2599-4/6	CA2599L-4	FK2599-6	1415 / 1800 + 1900	636.57 / 867.86
4" Front / 6" Rear	DJM2599-4/6+	CA2599L-4 CA2599U	FK2599-6	1415 / 1800 + 1900	846.52 / 1077.81
5" Front / 7" Rear	DJM2599-5/7+	CA2599L-5 CA2599U	FK2599-7	1415 / 1800 + 1900	962.28 / 1193.57
Calmax Anti-Sway bars					Discount Code
Performance Parts	ASB2599F	1.5" Tubular Front Bar			257.25
Performance Parts	ASB2599R	1.0" Solid Rear Bar			303.45

Silverado / Sierra 1999 - 2006 4WD + 2WD Torsion Bar Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM2000-2/4	TB2000A	HS2599-4	Factory / 1900 + 2000	323.94 / 555.23
3" Front / 4" Rear	DJM2001-3/4	CA2001L-3D CA2001L-3P	HS2599-4	1415 / 1900 + 2000	655.38 / 886.67
3" Front / 5" Rear	DJM2199-3/5	CA2001L-3D CA2001L-3P	FK2599-6 SH1099	1415 / 1800 + 1900	713.19 / 944.48



CHEVY

Silverado / Sierra 2003 - 2006 Crew Cab 4DR With leaf spring eye hangers welded to the frame

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 2" Rear	DJM2099-2/2	CS2599-2	SH2599-2	1415 / 2200	208.26 / 439.55
2" Front / 2" Rear	DJM2599-2/2	CA2599L-2	SH2599-2	1415 / 2200	462.93 / 694.22
2" Front / 4" Rear	DJM2099-2/4	CS2599-2	RK2099-4	1415 / 1900 + 2000	469.07 / 700.36
2" Front / 4" Rear	DJM2999-2/4	CA2599L-2	RK2099-4	1415 / 1900 + 2000	723.29 / 954.58
3" Front / 4" Rear	DJM2999-3/4	CA2599L-3	RK2099-4	1415 / 1900 + 2000	723.29 / 954.58
3" Front / 5" Rear	DJM2999-3/5	CA2599L-3	RK2099-5	1415 / 1900 + 2000	723.29 / 954.58
4" Front / 6" Rear	DJM2999-4/6	CA2599L-4	FK2599-6X	1415 / 1800 + 1900	660.29 / 891.58

From 02 - 06 Silverado's with long beds were built with 3 different leaf spring eye hangers!
It's important to physically check your truck before choosing the kits to lower your Long Bed!

EH2504



EH2598



EH2599



Silverado / Sierra 2002 -2006 Long Bed Only

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJMEH2504-2/4S	CS2599-2	HS2504-4	1415 / 1900 + 2000	393.41 / 624.70
2" Front / 4" Rear	DJMEH2504-2/4C	CA2599L-2	HS2504-4	1415 / 1900 + 2000	648.09 / 879.38
2" Front / 4" Rear	DJMEH2598-2/4S	CS2599-2	HS2598-4	1415 / 1900 + 2000	393.41 / 624.70
2" Front / 4" Rear	DJMEH2598-2/4C	CA2599L-2	HS2598-4	1415 / 1900 + 2000	648.09 / 879.38
2" Front / 4" Rear	DJMEH2599-2/4S	CS2599-2	HS2599-4	1415 / 1900 + 2000	393.41 / 624.70
2" Front / 4" Rear	DJMEH2599-2/4C	CA2599L-2	HS2599-4	1415 / 1800 + 1900	648.09 / 879.38
3" Front / 5" Rear	DJM2599-3/5	CA2599L-3	FK2599-6 SH1099	1415 / 1800 + 1900	705.97 / 937.26
4" Front / 6" Rear	DJM2599-4/6	CA2599L-4	FK2599-6	1415 / 1800 + 1900	636.57 / 867.86
4" Front / 6" Rear	DJM2599-4/6+	CA2599-4 CA2599U	FK2599-6	1415 / 1800 + 1900	846.52 / 1077.81
5" Front / 7" Rear	DJM2599-5/7+	CA2599-5 CA2599U	FK2599-7	1415 / 1800 + 1900	962.28 / 1193.57

Silverado / Sierra 2007 - 2015 w/ Cast Iron Spindle

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH2507-2	Factory / 2400	57.82 / 173.47
0" Front / 3" Rear	NA	NA	RK2507-3	Factory / 2200	173.48 / 289.13
2" Front / 3" Rear	DJM2510-2/3 Works on 4WD's!	CS2007F-2	RK2507-3	Factory / 2200	375.04 / 490.69



Silverado / Sierra 2007 - 2015 w/ Cast Iron Spindle

2" Front / 4" Rear	DJM2510-2/4 <i>Works on 4WD's!</i>	CS2007F-2	RK2507-4	Factory / 2200	501.88 / 617.53
2" Front / 3" Rear	DJM2507-2/3 <i>Works on 4WD's!</i>	CA2007L-2	RK2507-3	Factory / 2200	578.56 / 694.21
2" Front / 4" Rear	DJM2507-2/4 <i>Works on 4WD's!</i>	CA2007L-2	RK2507-4	Factory / 2200	723.29 / 838.94
3" Front / 4" Rear	DJM2507-3/4	CA2007-3	RK2507-4	Factory / 2200	847.33 / 962.98
3" Front / 5" Rear	DJM2507-3/5	CA2007-3	RK2507-5	Factory / 2100	847.33 / 962.98
4" Front / 6" Rear	DJM2507-4/6	CA2507-4	RK2507-6	Factory / 1900	789.51 / 905.16
5" Front / 7" Rear	DJM2507-5/7	CA2507-4	RK2507-7	Factory / 1800	690.33 / 805.98
Calmax Anti-Sway bars					Discount Code
Performance Parts	ASB2007F	1.5" Tubular Front Bar			257.25
Performance Parts	ASB2507R	1.0" Solid Rear Bar			313.95

Cast
Aluminum



The 2015 Silverado's come from the factory with either an cast aluminum or cast iron steering knuckles (spindles).

Note-If your Silverado has the cast iron knuckles use the 2007 - 2014 parts.

Note-If your Silverado has the Aluminum knuckles use the 2015 parts



Cast Iron

Silverado / Sierra 2015 w/ Cast Aluminum Spindle

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2510-2/3 <i>Works on 4WD's!</i>	CS2007F-2	RK2507-3	Factory / 2200	375.04 / 490.69
2" Front / 4" Rear	DJM2510-2/4 <i>Works on 4WD's!</i>	CS2007F-2	RK2507-4	Factory / 2200	501.87 / 617.52
2" Front / 3" Rear	DJM2515-2/3 <i>Works on 4WD's!</i>	CA2515L-2	RK2507-3	Factory / 2200	631.06 / 746.71
2" Front / 4" Rear	DJM2515-2/4 <i>Works on 4WD's!</i>	CA2515L-2	RK2507-4	Factory / 2100	775.79 / 891.44
3" Front / 4" Rear	DJM2515-3/4	CA2515-3	RK2507-4	Factory / 2100	899.83 / 1015.48
3" Front / 5" Rear	DJM2515-3/5	CA2515-3	RK2507-5	Factory / 2000	899.83 / 1015.48
4" Front / 6" Rear	DJM2515-4/6	CA2515-4	RK2507-6	Factory / 1900	842.01 / 957.66
4" Front / 7" Rear	DJM2515-4/7	CA2515-4	RK2507-7	Factory / 1800	742.83 / 858.48

Silverado / Sierra 2016 - 2017

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2510-2/3 <i>Works on 4WD's!</i>	CS2007F-2	RK2507-3	Factory / 2200	375.04 / 490.69
2" Front / 4" Rear	DJM2510-2/4 <i>Works on 4WD's!</i>	CS2007F-2	RK2507-4	Factory / 2200	501.87 / 617.53
2" Front / 3" Rear	DJM2515-2/3 <i>Works on 4WD's!</i>	CA2515L-2	RK2507-3	Factory / 2200	631.06 / 746.71



CHEVY

Silverado / Sierra 2016 - 2017

2" Front / 4" Rear	DJM2515-2/4 <i>Works on 4WD's!</i>	CA2515L-2	RK2507-4	Factory / 2100	779.79 / 891.43
3" Front / 4" Rear	DJM2515-3/4	CA2515-3	RK2507-4	Factory / 2100	899.83 / 1015.48
3" Front / 5" Rear	DJM2515-3/5	CA2515-3	RK2507-5	Factory / 2000	899.83 / 1015.48
4" Front / 6" Rear	DJM2515-4/6	CA2515-4	RK2507-6	Factory / 1900	842.01 / 957.66
4" Front / 7" Rear	DJM2515-4/7	CA2515-4	RK2507-7	Factory / 1800	742.83 / 858.48

Suburban 1992 - 1999

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2329-2/3	CS2351-3	HS1129-3	1315 / 2100	407.01 / 638.30
2" Front / 3" Rear	DJM2029-2/3	DS2056-2	HS1129-3	1415 / 2100	504.55 / 735.84
4" Front / 5" Rear	DJM1028-4/5	DS2056-2 CS2351-2	FK1028-5	1315 / 1800 + 2000	811.32 / 1042.61

Suburban 2000 - 2006 2WD & 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	DJM2000-0/2	NA	CS2000R-2 SE2000	Factory / Factory	271.93 / Factory
2" Front / 2" Rear	DJM2000-2/2	TB2000A	CS2000R-2 SE2000	Factory / Factory	352.91 / Factory
2" Front / 3" Rear	DJM2000-2/3	TB2000A	CS2000R-3 RK2000	Factory / 2000	352.91 / 468.56
3" Front / 3" Rear	DJM2000-3/3	CA2001L-3D CA2001L-3P	CS2000R-3 RK2000	1315 / 2000	805.88 / 1037.17
3" Front / 5" Rear	DJM2000-3/5	CA2001L-3D CA2001L-3P	CS2000R-5 RK2000	1315 / 1800	805.88 / 1037.17
Calmax Anti-Sway Bars					Discount Code
<i>Performance Parts</i>	ASB2001F	1.375" Tubular Front Bar			257.25
<i>Performance Parts</i>	ASB2001R	1.13" Solid Rear Bar			225.75

Suburban 2007 - 2014

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory / Factory	455.63 / Factory
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / Factory	577.17 / Factory
2" Front / 3" Rear	DJM2007-2/3	CA2007L-2	CS2007R-3 RK2007	Factory / 2200	798.59 / 914.24
2" Front / 4" Rear	DJM2017-2/4	CS2007F-2	RK2007-4	Factory / 2200	577.19 / 692.84
2" Front / 4" Rear	DJM2007-2/4	CA2007L-2	RK2007-4	Factory / 2200	798.59 / 914.24
3" Front / 4" Rear	DJM2007-3/4	CA2007-3	RK2007-4	Factory / 2200	922.64 / 1038.29



Suburban 2007 - 2014

Calmax Anti-Sway bar				Discount Code
Performance Parts	ASB2007F	1.5" Tubular Front Bar		257.25
Performance Parts	ASB2001R	1.13" Solid Rear Bar		225.75

Cast
Aluminum



The 2015 Suburban's come from the factory with either an cast aluminum or cast iron steering knuckles (spindles).

Note-If your Suburban has the cast iron knuckles use the 2007 - 2014 parts.

Note-If your Suburban has the Aluminum knuckles use the 2015 parts

Suburban 2015

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code
					W/O Shocks / With Shocks
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory / Factory	455.63 / Factory
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2200	577.17 / Factory
2" Front / 4" Rear	DJM2017-2/4	CS2007F-2	RK2007-4	Factory / 2200	577.17 / 692.82
2" Front / 3" Rear	DJM2015-2/3	CA2515L-2	CS2007R-3 RK2007	Factory / 2200	798.59 / 914.24
2" Front / 4" Rear	DJM2015-2/4	CA2515L-2	RK2007-4	Factory / 2200	798.59 / 914.24
3" Front / 4" Rear	DJM2015-3/4	CA2515-3	RK2007-4	Factory / 2200	922.64 / 1038.29

Tahoe / Sierra 1995 - 1999

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code
					W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1011-2	1415 / 2200	57.82 / 289.11
2" Front / 2" Rear	DJM2351-2/2	CS2351-2	SH1011-2	1315 / 2200	202.47 / 433.76
2" Front / 2" Rear	DJM2555-2/2	CA2555L-2	SH1011-2	1415 / 2200	405.05 / 636.34
2" Front / 2" Rear	DJM2056-2/2	DS2056-2	SH1011-2	1415 / 2200	319.39 / 544.68
2" Front / 3" Rear	DJM2329-2/3 (4 Door Only)	CS2351-2	HS1129-3	1315 / 2200	407.01 / 638.30
2" Front / 3" Rear	DJM2029-2/3 (4 Door Only)	DS2056-2	HS1129-3	1415 / 2200	504.55 / 735.84
3" Front / 3" Rear	DJM2329-3/3 (4 Door Only)	CS2351-3	HS1129-3	1315 / 2200	387.63 / 618.92
3" Front / 3" Rear	DJM2529-3/3 (4 Door Only)	CA2555L-3	HS1129-3	1415 / 2200	590.21 / 821.50
4" Front / 4" Rear	DJM1029-2D (2 Door Only)	DS2056-2 CS2351-2	FK1029-2D (2 Door)	1315 / 1700 + 1800	811.32 / 1042.61
4" Front / 4" Rear	DJM1029-4D (4 Door Only)	DS2056-2 CS2351-2	FK1029-4D (4 Door)	1315 / 1700 + 1800	811.32 / 1042.61



CHEVY

Tahoe / Yukon 2000 - 2006 2WD / 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	DJM2000-0/2	NA	CS2000R-2 SE2000	Factory / Factory	271.93
2" Front / 2" Rear	DJM2000-2/2	TB2000A	CS2000R-2 SE2000	Factory / Factory	352.91
2" Front / 3" Rear	DJM2000-2/3	TB2000A	CS2000R-3 RK2000	Factory / 2000	352.91 / 468.57
3" Front / 3" Rear	DJM2000-3/3	CA2001L-3D CA2001L-3P	CS2000R-3 RK2000	1315 / 2000	805.88 / 1037.17
3" Front / 3" Rear	DJM2000-3/3+	CA2001L-3D CA2001L-3P CA2000U	CS2000R-3 RK2000	1315 / 2000	1015.82 / 1247.11
Calmax Anti-Sway bar					Discount Code
Performance Parts	ASB2001F	1.375" Tubular Front Bar			257.25
Performance Parts	ASB2001R	1.13" Solid Rear Bar			225.75

Tahoe / Yukon 2007 - 2014 2WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory / Factory	455.63 / Factory
2" Front / 3" Rear	DJM2007-2/3	CA2007L-2	CS2007R-3 RK2007	Factory / 2000	798.59 / 914.24
2" Front / 4" Rear	DJM2007-2/4	CA2007L-2	RK2007-4	Factory / 2000	798.59 / 914.24
3" Front / 4" Rear	DJM2007-3/4	CA2007-3	RK2007-4	Factory / 2000	922.64 / 1038.29
Calmax Anti-Sway bar					
Performance Parts	ASB2007F	1.5" Tubular Front Bar			257.25
Performance Parts	ASB2001R	1.13" Solid Rear Bar			225.75

Tahoe / Yukon 2007 - 2014 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2000	577.17 / 692.82

Cast
Aluminum



The 2015 Tahoe's come from the factory with either a cast aluminum or cast iron steering knuckles (spindles).
Note-If your Tahoe has the cast iron knuckles use the 2007 - 2014 parts.
Note-If your has the Aluminum knuckles use the 2015 parts



Cast Iron

Tahoe / Yukon 2015 2WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2015-2/3	CA2515L-2	CS2007R-3 RK2007	Factory / 2000	798.59 / 914.24
2" Front / 4" Rear	DJM2015-2/4	CA2515L-2	RK2007-4	Factory / 2000	798.59 / 914.24
3" Front / 3" Rear	DJM2015-3/4	CA2515-3	RK2007-4	Factory / 2000	922.64 / 1038.29

Tahoe / Yukon 2015 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2000	577.17 / 692.82
2" Front / 4" Rear	DJM2017-2/4	CS2007F-2	RK2007-4	Factory / 2000	577.17 / 692.82

Trailblazer / Envoy 2000 - 2011 (Not for SS model)

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front Only	NA	K2301-F	NA	Factory / Factory	410.96
2" Front / 3" Rear	DJM2301-2/4	K2301-F	CS2301R-4	Factory / 1800	607.70 / 723.35
Calmax Anti-Sway Bar		ASB2301RA		1.0625" Adjustable Rear Bar	262.45

DJM Plus Kits

When you see the **+** you get more value



DJM Plus kits are a one part number solution for lowering your truck. Just like all of our kits, you get everything you need to do a complete installation, PLUS Calmax Upper Control Arms. DJM Plus Kits give you the maximum amount of alignment while optimizing ball joint angles, all for a special price. If your restoring a classic or fixing someone else's botched job you can have everything available for your truck with one part number delivered to you at one time! **That's a Plus!!**



FORD



It was 1965 when Ford announced their "Twin I-Beam Suspension" and we have been building our "Dream Beams" to lower these trucks for over twenty years! Our King Pin I-Beams are the most popular on the market. Twin I-Beams are still in production today in the SuperDuty series. Fords have evolved over the years from I-Beams to the modern upper and lower control arm suspensions, we've been here building lowering kits all along providing more choice for you the customizing enthusiasts.

COMPLETE DJM KITS



You can build a radical engine by combining parts made by different manufacturers but you really have to know what you're doing! The same thing is true when it comes to suspension parts.

You have a lot of parts to choose from to lower your Ford, some work together well and others, not so well. With that thought, keep in mind advanced installers and experienced shops have done enough suspension work to know which parts you can combine without bad side effects to get "the look". And really, their knowledge came from doing it wrong sometime in the past. So, if you want to do your own work and you're not an expert, seriously consider buying a complete suspension kit. The parts in kits are designed to work together in an optimum way, without nasty surprises. You won't have to buy any more parts to finish your job (suspension that is) and get to driving around! While it is fun to fool around in the garage, it's more fun to drive.

DJM Dream Beams



"Strongest and Most Accurate Lowering Beam Anywhere" That's what the magazines say about our Dream Beam systems for Fords with the "Twin I-Beam Suspension".

Starting in 1965 Ford has been using this rugged, durable suspension and they still use it in their SuperDuty platforms. What separates us from the other guys is the tubular design. Learn more about the Dream Beam story at www.djmsuspension.com

CALMAX Control Arms



Seamless DOM tubular construction makes CALMAX Control Arm strong with durable powder coating finish they are attractive and tough. All steel ball joints installed with urethane bushings and drops of 2" and 3" using factory coils Calmax arms are the professional choice. Learn more about Calmax Control Arms at www.djmsuspension.com

Coil Springs



Coil Springs are special, their dynamic, while other parts may pivot one way or another, coil springs actually are compressed to a shorter length and expand beyond their static length, and are responsible for setting the ride height of your truck! Are coil springs important? You bet, sometimes the stock coil springs are your best choice, sometimes engineered lowering coils are all you need!. Learn more about how coil springs work at www.djmsuspension.com

Flip Kits



Being able to move the rear axle from the bottom of a leaf spring to the top is called a flip kit. Actually nothing is "flipped" just moved, and this gives you from 4" to 8" of drop. It all depends on the thickness of the leaf spring pack. For the deep drop this is the ticket, you get more drop and better performance this way than say a lowered leaf. Learn more about flip kits and if this would be your best choice at www.djmsuspension.com

Hanger & Shackle Kits



For modest rear drops you should consider kits that are called Hanger and Shackle Kits, they move where the leaf spring mounts to the frame up towards the bed. This pulls the rear axle up or drops the rear of your truck. Unlike a flip kit, you don't move the rear axle relative to the leaf spring. You typically get from 3" to 5" of drop with these kits. Learn more about hanger and shackle kits at www.djmsuspension.com

Rear Kits



The new trucks and SUVs have made changes in their rear suspensions, coils spring rears, welded on leaf spring hangers, box designed frames, etc. We've designed "Rear Kits" hybrid type kits using parts from all the traditional ways of lowering to give you options when it comes to lowering the new, modern rigs being built today. They could have coil springs, shock extenders, frame C-sections, axle brackets, lowering blocks, trailing arm brackets and more. What ever you need! You can learn more about custom rear kits by going to www.djmsuspension.com

CALMAX SuperShocks



Performance and safety are very good reasons to have the best shocks you can buy. Not the most expensive, just the best. Having the correct shock length combined with proper valving make Calmax SuperShocks the best choice for lowered trucks and SUVs. They make pretty good factory replacement shocks as well! Learn more about the *how* and *why* of shocks at www.djmsuspension.com



FORD

F-100 1965 - 1972 King Pin Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM3004-3/4	DB3004-3	HS1130-4	See Below!	994.48 / 1226.13

Here's an important tip you need to know - Ford used a couple of different mounting ends on the shocks on F-100's from 65-79.

#1 - A loop mount with bushings on both ends of the shock

#2 - A loop mount with a bushing on the bottom mount with a threaded stem on top.

Front - If you have style #1 use shock part number [1409](#)

If you have style #2 use shock number [1415](#)

Rear - If you have style #1 use shock number [1900](#)

If you have style #2 use shock number [1910](#)

F-100 1973 - 1979 King Pin Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM3004A-3/4	DB3004-3	HS1123-4	See Above!	994.48 / 1226.13

F-150 1983 - 1986 Ball joints mounted in Beams

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM3003-3/4	DB3003-3	HS1123-4	1415 / 2000	825.93 / 1057.22
3" Front / 5" Rear	DJM3003-3/5	DB3003-3	FK3000-5	1415 / 1900	648.14 / 879.43

F-150 1987 - 1996 Ball joints mounted in Spindles

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM3000-3/4	DB3000-3	HS1123-4	1415 / 2000	825.93 / 1057.22
3" Front / 5" Rear	DJM3000-3/5	DB3000-3	FK3000-5	1415 / 1900	648.14 / 879.43

F-150 1997 - 2003

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM3097-2/4	CS3097-2	HS3097-4	1415 / 2015	428.14 / 659.43
4" Front / 6" Rear	DJM3097-4/6	CA3097L-4 CA3097U CS3097-2	FK3097-6	1415 / 1910	1203.68 / 1434.97

Beginning in 2004 Ford went from the traditional coil spring set up to a "Strut" type front suspension. This means your shock is in a tube (strut) with the coil spring mounted to the strut. It is removed as a one complete unit. We redesigned our control arms to lower without any modification to the strut. Installation is easy and you won't suffer from alignment or wheel clearance issues!



F-150 2004 - 2008

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM3205-2/4	CA3205L-2D CA3205L-2P	RK3204-4	Factory / 2200	815.96 / 931.60
3" Front / 5" Rear	DJM3205-3/5	CA3205L-3D CA3205L-3P	RK3204-5	Factory / 2200	700.19 / 815.84

F-150 2009 - 2013

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM3209-2/4	CA3209L-2D CA3209L-2P	RK3209-4	Factory / 2200	815.96 / 931.60
3" Front / 5" Rear	DJM3209-3/5	CA3209L-3D CA3209L-3P	RK3209-5	Factory / 2200	700.19 / 815.84

F-150 2014

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM3214-2/4	CA3214L-2D CA3214L-2P	RK3209-4	Factory / 2200	899.96 / 1015.61
3" Front / 5" Rear	DJM3214-3/5	CA3214L-3D CA3214L-3P	RK3209-5	Factory / 2200	784.19 / 899.84

F-150 2015 - 2017

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 6" Rear	DJM3215-3/6	CA3215L-3D CA3215L-3P	RK3215-6	Factory / 2200	784.19 / 899.84

F-250/F-350 1987 - 1998

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1015-2	1415 / 2200	92.54 / 323.82
3" Front / 4" Rear	DJM3005-3/4	DB3005-3	HS1135-4	1415 / 2000	1053.32 / 1284.61

F250/F-350 Superduty 1999 - 2007

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM3015-3/3	DB3015-3	EH3015-3	1415 / 2200	983.86 / 1215.15
3" Front / 5" Rear	DJM3015-3/5	DB3015-3	HS3015-5	1415 / 2000	1099.57 / 1330.86



FORD

F250/F-350 Superduty 2008 - 2016, Have a 2017? - Call Us!

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 5" Rear	DJM3018-3/5	DB3015-3	RK3018	1415 / 2200	1140.90 / 1372.19

Excursion 1999 - 2002

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM3016-3/5	DB3015-3	HS3016-3	1415 / 2100	1099.57 / 1330.86

Expedition 1998 - 2002

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 2" Rear	DJM3197-2/2	CS3097-2	CS3197R-2	1415 / 2000	381.90 / 613.19
4" Front / 4" Rear	DJM3197-4/4	CA3097L-2 CA3097U CS3097-2	CS3197R-4	1415 / 1900	1145.80 / 1377.09

Ranger 1983 - 1988 Ball Joints mounted in Beam

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM3002-3/4	DB3002-3	FK3001-4	1415 / 1900	555.53 / 786.82

Ranger 1989 - 1997 Ball Joints mounted in Spindle

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 4" Rear	DJM3001-3/4	DB3001-3	FK3001-4	1415 / 1900	555.53 / 786.82

Ranger 1998 - 2010 Drum Rear Brakes Only

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM3098-2/3	CS3098-2	FK3098-3	1315 / 1900 + 2000	300.87 / 532.16
4" Front / 5" Rear	DJM3098-4/5	CA3098L-4 CA3098U CS3098-2	FK3098-5	1315 / 1800 + 1900	856.40 / 1087.69

Ranger 2011 - 2014 Disc Rear Brakes Only

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM3010-2/3	CS3098-2	FK3010-3	1315 / 1900 + 2100	347.52 / 578.81
4" Front / 5" Rear	DJM3010-4/5	CA3098L-4 CA3098U CS3098-2	FK3010-5	1315 / 1800 + 1900	856.40 / 1087.69

DJM Have Fords Covered



Rangers from 1983 - 2014
I Beam Trucks 83 - 97
Control Arm Trucks 98 - 14



F100's from 1965 - 1979
King Pin Suspensions



F150's from 1983 - 2017
I Beam Trucks 83 - 96
Control Arms Trucks 97 - 17



F250 / 350 and Superduty's
1987 - 2017



Our exclusive DJM Dream Beams and Calmax Control Arms have been designed for all your Ford needs. From the 1965 "Twin I Beam" suspension to the modern control arm suspensions DJM has specially designed lowering kits to give you "The Look". All DJM suspension kits can be aligned to factory specifications and ride great, just select your application, amount of drop and you will get everything you need! It's that easy!!

DODGE



COMPLETE DJM KITS



You can build a radical engine by combining parts made by different manufacturers but you really have to know what you're doing! The same thing is true when it comes to suspension parts.

You may be tempted to cut or modify factory parts or mix different types of suspension parts together to get your stance. Might work or maybe not too well. With that thought keep in mind advanced installers and experienced shops have done enough suspension work to know which parts you can combine without bad side effects to get "the look". And really, their knowledge came from doing it wrong sometime in the past. So if you want to do your own work and you're not an expert, seriously consider buying a complete suspension kit. The parts in kits are designed to work together in an optimum way, with out nasty surprises. You won't have to buy any more parts to finish your job (suspension that is) and get to driving around! While it is fun to fool around in the garage, it's more fun to drive.

CALMAX Control Arms



Seamless DOM tubular construction makes CALMAX Control Arms strong with durable powder coating finish they are attractive and tough. All steel ball joints installed with urethane bushings and drops of 2" and 3" using factory coils Calmax arms are the professional choice. Learn more about Calmax Control Arms at www.djmsuspension.com

Coil Springs



Coil Springs are special, their dynamic, while other parts may pivot one way or another, coil springs actually are compressed to a shorter length and expand beyond their static length, and are responsible for setting the ride height of your truck! Are coil springs important? You bet, sometimes the stock coil springs are your best choice, sometimes engineered lowering coils are all you need!. Learn more about how coil springs work at www.djmsuspension.com

CALMAX SuperShocks



Performance and safety are very good reasons to have the best shocks you can buy. Not the most expensive, just the best. Having the correct shock length combined with proper valving make Calmax SuperShocks the best choice for lowered trucks and SUVs. They make pretty good factory replacement shocks as well! Learn more about the how and why of shocks at www.djmsuspension.com

Flip Kits



Being able to move the rear axle from the bottom of a leaf spring to the top is called a flip kit. Actually nothing is "flipped" just moved, and this gives you from 4" to 8" of drop . It all depends on the thickness of the leaf spring pack. For the deep drop this is the ticket, you get more drop and

better performance this way than say a lowered leaf. Learn more about flip kits and if this would be your best choice at www.djmsuspension.com

Hanger & Shackle Kits



For modest rear drops you should consider kits that are called Hanger and Shackle Kits, they move where the leaf spring mounts to the frame up towards the bed. This pulls

the rear axle up or drops the rear of your truck. Unlike a flip kit, you don't move the rear axle relative to the leaf spring. You typically get from 3" to 4" of drop with these kits. Learn more about hanger and shackle kits at www.djmsuspension.com

Rear Kits



The new trucks and SUVs have made changes in their rear suspensions, coils spring rears, welded on leaf spring hangers, box designed frames, etc. We've designed "Rear Kits" hybrid type kits using parts from all the traditional ways of lowering to give you options when it

comes to lowering the new, modern rigs being built today. They could have coil springs, shock extenders, frame C-sections, axle brackets, lowering blocks, trailing arm brackets and more. What ever you need!

You can learn more about custom rear kits by going to www.djmsuspension.com

DODGE

Dakota 1997 - 2002

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2397-2/3	CA2397L-2	SB2397-3	1315 / 1900	555.53 / 786.82
3" Front / 5" Rear	DJM2397-3/5	CA2397L-3	HS2397-5	1315 / 1900	752.34 / 983.63

Dakota RT 1997 - 2004

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 3" Rear	DJM2397RT-2/3	CA2397L-2	SB2397-3RT	1315 / 1900	578.68 / 809.97
3" Front / 3" Rear	DJM2397RT-3/3	CA2397L-3	SB2397-3RT	1315 / 1900	578.68 / 809.97

Durango 1999 - 2002 2WD Only

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 2" Rear	DJM2399-2/2	CA2397L-2	RK2399-2	1315 / 2400	694.45 / 925.74
3" Front / 3" Rear	DJM2399-3/3	CA2397L-3	RK2399	1315 / 2400	694.45 / 925.74

Ram 1500 1994 - 1999

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1009-2		57.82 / Factory
2" Front / 4" Rear	DJM2391-2/4	CS2391-2	HS1139-4	1315 / 2100	433.93 / 665.22
4" Front / 6" Rear	DJM2391-4/6	CA2391L-4 CA2391U CS2391-2	FK1091-6 CM2391	1115 / 1900	1545.09 / 1776.38

Ram 1500 2000

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
0" Front / 2" Rear	NA	NA	SH1009-2		57.82 / Factory
2" Front / 4" Rear	DJM2390-2/4	CS2391-2	HS1139-4	1315 / 2100	433.93 / 665.21
4" Front / 6" Rear	DJM2390-4/6	CA2390L-4 CA2390U CS2391-2	FK1091-6	1115 / 1900	1637.75 / 1869.04

Ram 1500 2002 - 2005

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4" Rear	DJM2392-2/4	CS2392-2	FK2392-4	1315 / 2200 + 2400	480.30 / 711.59
2" Front / 4" Rear	DJM2392-2/4	CA2392L-2	FK2392-4	1415 / 2200 + 2400	752.34 / 983.63
3" Front / 5" Rear	DJM2392-3/5	CA2392L-3	FK2392-4	1415 / 2200 + 2400	752.34 / 983.63

DODGE

Ram 1500 2006 - 2008

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
2" Front / 4"Rear	DJM2306-2/4	CS2392-2	FK2392-4	1315 / 2200 + 2400	480.30 / 711.59

TOYOTA



COMPLETE DJM KITS



You can build a radical engine by combining parts made by different manufacturers but you really have to know what you're doing! The same thing is true when it comes to suspension parts.

Toyota build trucks big and small, You may be tempted to cut or modify factory parts or mix different types of suspension parts together to get your stance. Might work or maybe not too well. With that thought, keep in mind advanced installers and experienced shops have done enough suspension work to know which parts you can combine without bad side effects to get "the look". And really, their knowledge came from doing it wrong sometime in the past. So if you want to do your own work and you're not an expert, seriously consider buying a complete suspension kit. The parts in kits are designed to work together in an optimum way, with out nasty surprises. You won't have to buy any more parts to finish your job (suspension that is) and get to driving around! While it is fun to fool around in the garage, it's more fun to drive.



TOYOTA

CALMAX Control Arms



Seamless DOM tubular construction makes CALMAX Control Arms strong with durable powder coating finish they are attractive and tough. All steel ball joints installed with urethane bushings and drops of 3" using factory coils Calmax arms are the professional choice. Learn more about Calmax Control Arms at www.djmsuspension.com

Rear Kits



The new trucks and SUVs have made changes in their rear suspensions, coils spring rears, welded on leaf spring hangers, box designed frames, etc. We've designed "Rear Kits" hybrid type kits using parts from all the traditional ways of lowering to give you options when it comes to lowering the new, modern rigs being built today. They could have coil springs, shock extenders, frame C-sections, axle brackets, lowering blocks, trailing arm brackets and more. What ever you need!

You can learn more about custom rear kits by going to www.djmsuspension.com

CALMAX SuperShocks



Performance and safety are very good reasons to have the best shocks you can buy. Not the most expensive, just the best. Having the correct shock length combined with proper valving make Calmax SuperShocks the best choice for lowered trucks and SUVs. They make pretty good factory replacement shocks as well! Learn more about the how and why of shocks at www.djmsuspension.com

Toyota Pick Up 1988 - 1996

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM2855-3/3	CA2855L-3	LB3LK	1315 / 2000	333.29 / 564.58
3" Front / 4" Rear	DJM2855-3/4	CA2855L-3	LB4LK	1315 / 2000	335.59 / 566.88

Tacoma 1995 - 2004

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM2895-3/3	Complete Kit	LB3LK	1315 / 1900	346.92 / 578.21
3" Front / 4" Rear	DJM2895-3/4	Complete Kit	LB4LK	1315 / 1900	346.92 / 578.21
3" Front / 3" Rear	DJM2896-3/3	Complete Kit	SB3LK	1315 / 1900	399.33 / 630.62
3" Front / 4" Rear	DJM2896-3/4	Complete Kit	SB4LK	1315 / 1900	399.33 / 630.62

Tacoma 2005 - 2014 *Note: DJM2816 kits have ball joints installed (Retail Only)*

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM2806-3/3	CA2806L-3	RK2806-3	Factory / 1910	733.80 / 849.45
3" Front / 4" Rear	DJM2806-3/4	CA2806L-3	RK2806-4	Factory / 1910	733.80 / 849.45
3" Front / 3" Rear	DJM2816-3/3	CA2816L-3	RK2806-3	Factory / 1910	909.25 / 1024.90
3" Front / 4" Rear	DJM2816-3/4	CA2816L-3	RK2806-4	Factory / 1910	909.25 / 1024.90

Tundra 2007 - 2014 *Note: DJM2818 kits have ball joints installed (Retail Only)*

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 5" Rear	DJM2808-3/5	CA2808L-3	RK2808-5	Factory / 2215	849.92 / 956.57
3" Front / 5" Rear	DJM2818-3/5	CA2818L-3	RK2808-5	Factory / 2215	960.17 / 1075.82

Complete kits are the best way to insure you get everything you need to lower your truck, add Calmax SuperShocks and you're ready to go! Note: Tacoma and Tundra Kits with ball joints installed are available for retail sales only.



2005 - 2014 Tacoma



2007 - 2014 Tundra



1995 - 2004 Tacoma



1988 - 1996 Toyota Pick Up



MINI TRUCKS



COMPLETE DJM KITS



You can build a radical engine by combining parts made by different manufacturers but you really have to know what you're doing! The same thing is true when it comes to suspension parts.

Mini Trucks are still popular! These complete kits are inexpensive and easy to install. Everything you need in one kit! Don't gamble with mixing different parts when you can have engineered complete suspension systems this easy.

CALMAX Control Arms



Modular fabricated construction makes CALMAX Control Arms strong, a durable powder coating finish makes them attractive and tough. Using your factory ball joints gets you 3" of drop with the factory torsion bars. Calmax arms are the professional choice. Learn more about Calmax Control Arms at www.djmsuspension.com

Universal Lowering Blocks



Lowering block kits are the easiest and best value when it comes to lowering the rear of Mini Trucks. All Universal Lowering Block kits come complete with high strength U-bolts with rolled threads, lock washers & nuts. Blocks are available in both cast aluminum or steel. See more information at www.djmsuspension.com

CALMAX SuperShocks



Performance and safety are very good reasons to have the best shocks you can buy. Not the most expensive, just the best. Having the correct shock length combined with proper valving make Calmax SuperShocks the best choice for lowered trucks and SUVs. They make pretty good factory replacement shocks as well! Learn more about the how and why of shocks at www.djmsuspension.com

MINI TRUCKS



Mazda Pick Up 1986 - 1993

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM2955-3/3	CA2955L-3	LB3LK	1315 / 2000	333.29 / 564.58
3" Front / 4" Rear	DJM2955-3/4	CA2955L-3	LB4LK	1315 / 2000	335.59 / 566.88

Nissan Hardbody 1986 1/2 - 1997

Amount of Drop	Complete Kits	Front	Rear	Shocks	Discount Code W/O Shocks / With Shocks
3" Front / 3" Rear	DJM2755-3/3	CA2755L-3	LB3LK	1315 / 2000	333.29 / 564.58
3" Front / 4" Rear	DJM2755-3/4	CA2755L-3	LB4LK	1315 / 2000	335.59 / 566.88



1986 - 1993 Mazda Pick Up



1986 1/2 - 1997 Nissan Hardbody

DJM CALMAX Control Arms

CA2001L-3D	2000 - 2004 Chevy Suburban/Tahoe/Avalanche Lower Arms (drivers Side)	206.20	25lbs
CA2001L-3P	2000 - 2004 Chevy Suburban/Tahoe/Avalanche Lower Arms (passenger Side)	206.20	25lbs
CA2000U	2000 - 2004 Chevy Suburban/Tahoe/Avalanche Upper Control Arms	347.21	20lbs
CA2007-3	2007 - 2014 Chevy Tahoe/Silverado 3" Upper and Lower Control Arms	529.15	50lbs
CA2007L-2	2007 - 2014 Chevy Suburban/Tahoe/Silverado Lower Control Arms	405.11	40lbs
CA2301U	2001 - 2010 Chevy Trailblazer/Envoy Upper Control Arms	347.21	15lbs
CA2331L-3	1982 - 2001 Chevy S10/S15 3" Lower Control Arms	324.07	40lbs
CA2355L-3	1963 - 1970 C10 3" Lower Control Arms (drum brakes only)	544.03	50lbs
CA2355U	1963 - 1970 C10 Upper Control Arms (drum brakes only)	347.22	20lbs
CA2356L-3	1971 - 1987 C10 3" Lower Control Arms (disc brakes only)	544.03	50lbs
CA2356U	1971 - 1987 C10 Upper Control Arms (disc brakes only)	347.22	20lbs
CA2390L-4	2000 Dodge Ram 1500 Lower Control Arms	497.72	50lbs
CA2390U	2000 Dodge Ram 1500 Upper Control Arms	405.11	20lbs
CA2391L-4	1994 - 1999 Dodge Ram 1500 Lower Control Arms	462.99	50lbs
CA2391U	1994 - 1999 Dodge Ram 1500 Upper Control Arms	347.22	20lbs
CA2392L-2	2002 - 2005 Dodge Ram 1500 2" Lower Control Arms	462.99	50lbs
CA2392L-3	2002 - 2005 Dodge Ram 1500 3" Lower Control Arms	462.99	50lbs
CA2397L-2	1997 - 2002 Dodge Dakota/Durango 2" Lower Control Arms	462.99	40 lbs
CA2397L-3	1997 - 2002 Dodge Dakota/Durango 3" Lower Control Arms	462.99	40lbs
CA2400L-3	2004 - 2014 Chevy Colorado/Canyon 3" Lower Control Arms	324.07	35lbs
CA2507-4	2007 - 2014 Chevy Silverado 4" Upper and Lower Control Arms	529.15	50lbs
CA2515L-2	2015 Chevy Suburban/Tahoe/Silverado 2" Lower Control Arms (cast aluminum steering knuckle)	457.61	40lbs
CA2515-3	2015 Chevy Suburban/Tahoe/Silverado 3" Upper and Lower Control Arms (cast aluminum steering knuckle)	581.65	50lbs
CA2515-4	2015 Chevy Suburban/Tahoe/Silverado 3" Upper and Lower Control Arms (cast aluminum steering knuckle)	581.65	50lbs
CA2515U	2015 Chevy Suburban/Tahoe/Silverado Upper Control Arms (cast aluminum steering knuckle)	347.21	20lbs
CA2555L-2	1988 - 1998 Chevy C1500 2" Lower Control Arms	347.22	45lbs
CA2555L-3	1988 - 1998 Chevy C1500 3" Lower Control Arms	347.22	45lbs
CA2555L-4	1988 - 1998 Chevy C1500 Lower Control Arms	347.22	45lbs
CA2555U	1988 - 1998 Chevy C1500 Upper Control Arms	347.21	20lbs
CA2599L-2	1999 - 2006 Chevy Silverado 2" Lower Control Arms	405.11	45lbs
CA2599L-3	1999 - 2006 Chevy Silverado 3" Lower Control Arms	405.11	45lbs
CA2599L-4	1999 - 2006 Chevy Silverado 4" Lower Control Arms	405.11	45lbs
CA2599L-5	1999 - 2006 Chevy Silverado 5" Lower Control Arms	752.34	45lbs
CA2599U	1999 - 2006 Chevy Silverado Upper Control Arms	347.22	20lbs
CA2602L-3D	2001 - 2010 Chevy C2500/3500 HD 3" Lower Control Arms (drivers side)	260.44	25lbs
CA2602L-3P	2001 - 2010 Chevy C2500/3500 HD 3" Lower Control Arms (passenger side)	260.44	25lbs

DJM Individual Parts and Prices

CA2655L-3	1973 - 1991 Chevy C30 3" Lower Control Arms	578.74	50lbs
CA2655U	1973 - 1991 Chevy C30 3" Upper Control Arms	347.21	25lbs
CA2699L-6D	2001 - 2010 Chevy 1500/2500/3500 HD 6" Lower Control Arms (drivers side)	289.38	25lbs
CA2699L-3P	2001 - 2010 Chevy 1500/2500/3500 HD 6" Lower Control Arms (passenger side)	289.38	25lbs
CA2699U	2001 - 2010 Chevy 1500/2500/3500 HD Upper Control Arms	405.11	25lbs
CA2755L-3	1986 1/2 - 1996 Nissan Hardbody 3" Lower Control Arms	289.35	15lbs
CA2806-3	2005 - 2008 Toyota Tacoma 3" Upper and Lower Control Arms	496.07	40lbs
CA2808L-3	2007 - 2014 Toyota Tundra 3" Lower Control Arms	496.07	45lbs
CA2855L-3	1988 - 1996 Toyota Pick Up 3" Lower Control Arms	289.35	15lbs
CA2955L-3	1986 - 1994 Mazda Pick Up 3" Lower Control Arms	289.35	15lbs
CA3097L-4	1997 - 2002 Ford F150/Expedition Lower Control Arms	439.83	50lbs
CA3097U	1997 - 2002 Ford F150/Expedition Upper Control Arms	324.07	20lbs
CA3098L-4	1998 - 2014 Ford Ranger Lower Control Arms	347.22	50lbs
CA3098U	1998 - 2014 Ford Ranger Upper Control Arms	289.35	20lbs
CA3205L-2D	2004 - 2008 Ford F150 2" Lower Control Arms (drivers side)	231.49	25lbs
CA3205L-2P	2004 - 2008 Ford F150 2" Lower Control Arms (passenger side)	231.49	25lbs
CA3205L-3D	2004 - 2008 Ford F150 3" Lower Control Arms (drivers side)	231.49	25lbs
CA3205L-3P	2004 - 2008 Ford F150 3" Lower Control Arms (passenger side)	231.49	25lbs
CA3209L-2D	2009 - 2013 Ford F150 2" Lower Control Arms (drivers side)	231.49	25lbs
CA3209L-2P	2009 - 2013 Ford F150 2" Lower Control Arms (passenger side)	231.49	25lbs
CA3209L-3D	2009 - 2013 Ford F150 3" Lower Control Arms (drivers side)	231.49	25lbs
CA3209L-3P	2009 - 2013 Ford F150 3" Lower Control Arms (passenger side)	231.49	25lbs
CA3214L-2D	2014 Ford F150 2" Lower Control Arms (drivers side)	273.49	25lbs
CA3214L-2P	2014 Ford F150 2" Lower Control Arms (passenger side)	273.49	25lbs
CA3214L-3D	2014 Ford F150 3" Lower Control Arms (drivers side)	273.49	25lbs
CA3214L-3P	2014 Ford F150 3" Lower Control Arms (passenger side)	273.49	25lbs
CA3215L-3D	2015 Ford F150 3" Lower Control Arms (drivers side)	273.49	25lbs
CA3215L-3P	2015 Ford F150 3" Lower Control Arms (passenger side)	273.49	25lbs

DJM Drop Spindles

DS2031-2	1982 - 1998 Chevy S10/S15 2" Drop Spindles	217.57	40lbs
DS2045H-3	1973 - 1987 Chevy C10 3" Drop Spindles (1.25" brake rotor)	325.51	50lbs
DS2045L-3	1973 - 1987 Chevy C10 3" Drop Spindles (1.00" brake rotor)	325.51	50lbs
DS2055-2	1988 - 1991 Chevy C1500 2" Drop Spindles (Std. Cab Only)	261.57	45lbs
DS2056-2	1992 - 1998 Chevy C1500 2" Drop Spindles (Incl. 88-98 X-Cab)	261.57	45lbs
DS2057-3	1992 - 1999 Chevy C3500 3" Drop Spindles	405.10	55lbs

DJM Individual Parts and Prices

DJM Dream Beams

DB3000-3	1987 - 1996 Ford F150 3" Dream Beams (ball joints mounted in spindle)	520.87	60lbs
DB3001-3	1989 - 1997 Ford Ranger 3" Dream Beams (ball joints mounted in spindles)	486.14	60lbs
DB3002-3	1983 - 1988 Ford Ranger 3" Dream Beams (ball joints mounted in beams)	520.87	60lbs
DB3003-3	1983 - 1986 Ford F150 3" Dream Beams (ball joints mounted in beams)	578.75	60lbs
DB3004-3	1965 - 1979 Ford F100 3" Dream Beams (king pins only)	752.40	70lbs
DB3005-3	1987 - 1998 Ford F250/350 3" Dream Beams	810.27	75lbs
DB3015-3	1994 - 2014 Ford F250/350 Superduty 3" Dream Beams	752.40	75lbs

DJM Coil Springs

CS2000R-2	2000 - 2015 Chevy Suburban/Tahoe 2" Rear Lowering Springs	196.74	22lbs
CS2000R-3	2000 - 2015 Chevy Suburban/Tahoe 3" Rear Lowering Springs	196.74	25lbs
CS2000R-5	2000 - 2015 Chevy Suburban 5" Rear Lowering Springs	196.74	25lbs
CS2007-F	2007 - 2015 Chevy Suburban/Silverado/Tahoe 2" Rear Lowering Springs	183.70	20lbs
CS2321-1	1982 - 2001 Chevy S10/S15 1" Front Lowering Springs	127.28	27lbs
CS2321-2	1982 - 2001 Chevy S10/S15 2" Front Lowering Springs	127.28	27lbs
CS2321-3	1982 - 2001 Chevy S10/S15 3" Front Lowering Springs	127.28	27lbs
CS2351-2	1988 - 1998 Chevy C1500 2" Front Lowering Springs	144.65	30lbs
CS2351-3	1988 - 1998 Chevy C1500 3" Front Lowering Springs	144.65	30lbs
CS2352-2	1992 - 1999 Chevy C3500 2" Front Lowering Springs	185.16	30lbs
CS2353-2	1963 - 1987 Chevy C10 2" Front Lowering Springs	185.16	30lbs
CS2353-3	1963 - 1987 Chevy C10 3" Front Lowering Springs	185.16	30lbs
CS2354R-3	1963 - 1987 Chevy C10 3" Rear Lowering Springs	196.74	25lbs
CS2354R-4	1963 - 1987 Chevy C10 4" Rear Lowering Springs	196.74	25lbs
CS2371-2	1985 - 1999 Chevy Astro/Safari 2" Front Lowering Springs	173.59	25lbs
CS2391-2	1994 - 2000 Dodge Ram 1500 2" Front Lowering Springs	190.95	28lbs
CS2392-2	2002 - 2003 Dodge Ram 1500 2" Front Lowering Springs	190.95	30lbs
CS2400-2	2004 - 2014 Chevy Colorado/Canyon 2" Front Lowering Springs	127.28	18lbs
CS2599-2	1999 - 2006 Chevy Silverado 2" Front Lowering Springs	150.43	35lbs
CS3097-2	1997 - 2002 Ford F150/Expedition 2" Front Lowering Springs	185.16	34lbs
CS3098-2	1998 - 2014 Ford Ranger 2" Front Lowering Springs	150.43	30lbs
CS3197R-2	1997 - 2002 Ford Expedition 2" Rear Lowering Springs	196.74	22lbs
CS3197R-4	1997 - 2002 Ford Expedition 4" Rear Lowering Springs	196.74	22lbs

DJM Complete Flip Kits

FK1012-5	1970 - 1972 Chevy C10 5" Rear Axle Flip Kit	173.59	15lbs
FK1024-5	1973 - 1987 Chevy C10 5" Rear Axle Flip Kit	116.47	10lbs

DJM Individual Parts and Prices

FK1024-LTD	1973 - 1987 Chevy C10 5" Rear Axle Flip Kit (with u-bolts & spring plates)	202.59	15lbs
FK1025-6	1988 - 1998 Chevy C1500 6" Rear Axle Flip Kit	231.46	50lbs
FK1025-X	1988 - 1998 Chevy C1500 X-Cab 6" Rear Axle Flip Kit	254.61	50lbs
FK1026-7	1992 - 1999 Chevy C3500 7" Rear Axle Flip Kit	289.35	55lbs
FK1027-3	1985 - 1995 Chevy Astro/Safari 3" Rear Axle Flip Kit (composite leaf spring only)	289.35	25lbs
FK1027-97	1995 - 2000 Chevy Astro/Safari 3" Rear Axle Flip Kit (steel leaf spring only)	289.35	33lbs
FK1028-5	1993 - 1999 Chevy Suburban 5" Rear Axle Flip Kit	405.11	60lbs
FK1029-2D	1995 - 1999 Chevy Tahoe 2WD/2Door 4" Rear Axle Flip Kit	405.11	60lbs
FK1029-4D	1995 - 1999 Chevy Tahoe 2WD/4Door 4" Rear Axle Flip Kit	405.11	60lbs
FK1091-6	1994 - 2000 Dodge Ram 1500 6" Rear Axle Flip Kit	254.61	40lbs
FK2392-4	2002 - 2004 Dodge Ram 1500 4" Rear Axle Flip Kit	289.35	30lbs
FK2599-6	1999 - 2006 Chevy Silverado 6" rear Axle Flip Kit	231.46	50lbs
FK2599-6X	1999 - 2006 Chevy Silverado X-Cab 6" rear Axle Flip Kit	254.61	50lbs
FK2599-7	1999 - 2006 Chevy Silverado 7" rear Axle Flip Kit	289.35	50lbs
FK2599-7X	1999 - 2006 Chevy Silverado X-Cab 7" rear Axle Flip Kit	324.07	50lbs
FK2699-8	2001 - 2010 Chevy 1500/2500/3500 HD 8" Rear Axle Flip kit	289.35	60lbs
FK3000-5	1983 - 1996 Ford F150 5" Rear Axle Flip Kit	69.39	5lbs
FK3001-5	1983 - 1997 Ford Ranger 5" Rear Axle Flip Kit	69.39	5lbs
FK3097-6	1997 - 2002 Ford F150 6" Rear Axle Flip Kit	254.83	40lbs
FK3098-3	1998 - 2010 Ford Ranger 3" Rear Axle Flip Kit	150.43	15lbs
FK3098-5	1998 - 2010 Ford Ranger 5" Rear Axle Flip Kit	69.39	10lbs
FK3010-3	2011-2014 Ford Ranger 3" Rear Axle Flip Kit	69.39	10lbs
FK3010-5	2011-2014 Ford Ranger 5" Rear Axle Flip Kit	192.89	15lbs

DJM "Flip Only" Kits

FK-UAL	Universal Axle Flip (axle locator's only)	115.70	7lbs
FK1025-F	1988 - 1998 Chevy C1500 Flip Only (no c-sections)	144.65	25lbs
FK1026-F	1992 - 1999 Chevy C2500/3500 8-Lug Flip Only (no c-sections)	173.58	25lbs
FK1028-F	1995 - 1999 Chevy Suburban/Tahoe Flip Only (no c-sections)	144.65	25lbs
FK1091-F	1994 - 2000 Dodge Ram 1500 Flip Kit Only (no c-sections)	144.65	25lbs
FK2392-F	2002 - 2005 Dodge Ram 1500 Flip Kit Only (no c-sections)	144.65	25lbs
FK2599-F	1999 - 2006 Chevy Silverado Flip Only (no c-sections)	144.65	25lbs
FK2699-F	2001 - 2010 Chevy 1500/2500/3500 HD Flip Only (no-sections)	144.65	25lbs
FK30097-F	1997 - 2002 Ford F150 Flip Only (no c-sections)	144.65	25lbs

DJM Individual Parts and Prices

DJM Flip Kit C-Section Only Kits

FK1025-C	1988 - 1998 Chevy C1500 Frame Supports (c-sections only)	144.22	20lbs
FK1028-C	1992 - 1999 Chevy Suburban Frame Supports (c-sections only)	208.31	20lbs
FK1091-C	1994 - 2000 Dodge Ram 1500 Frame Supports (c-sections only)	144.22	20lbs
FK2397-C	1997 - 2002 Dodge Dakota Frame Supports (c-sections only)	231.47	15lbs
Fk2599-C	1999 - 2006 Chevy Silverado Frame Supports (c-sections only)	144.22	20lbs
FK2699-C	2001 - 2010 Chevy 1500/2500/3500 HD Frame Supports (c-sections only)	185.16	25lbs
FK3097-C	1997 - 2002 Ford F150 Frame Supports (c-sections only)	144.22	20lbs
FK3098-C	1998 - 2014 Ford Ranger Frame Supports (c-sections only)	185.16	15lbs

DJM Leaf Spring Eye Hanger Kits

EH1019-2	1973 - 1991 Chevy C30 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH1020-2	1973 - 1991 Chevy C10 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH1021-2	1988 - 1998 Chevy C1500 2" Leaf Spring lowering eye hangers	115.70	12lbs
EH1022-2	1992 - 1998 Chevy C3500 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH1023-2	1973 - 1996 Ford F150 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH1028	1996 - 1999 Chevy Tahoe/Suburban Leaf Spring LIFTING eye hangers	185.16	15lbs
EH1029-2	1996 - 1999 Chevy Tahoe 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH1030-2	1965 - 1972 Ford F100 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH1035-2	1973 - 1997 Ford F350 2" Leaf Spring lowering eye hangers	208.31	15lbs
EH1039-2	1994 - 2000 Dodge Ram 1500 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH2397-2	1997 - 2002 Dodge Dakota 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH2504-2	2002 - 2006 Chevy Silverado Long Bed Only 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH2598-2	2002 - 2006 Chevy Silverado Long Bed Only 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH2599-2	1999 - 2006 Chevy Silverado 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH2601-2	2001 - 2010 Chevy 2500/3500 HD Long Bed 2" Leaf Spring lowering eye hangers	231.46	15lbs
EH2602-2	2001 - 2010 Chevy 1500 HD Long Bed Only 2" Leaf Spring lowering eye hangers	231.46	15lbs
EH2603-2	2001 - 2010 Chevy 2500/3500 HD Short Bed Only 2" Leaf Spring lowering eye hangers	231.46	15lbs
EH3015-3	1999 - 2004 Ford F350 Superduty 3" Leaf Spring lowering eye hangers	231.46	25lbs
EH3097-2	1997 - 2003 Ford F150 2" Leaf Spring lowering eye hangers	185.16	15lbs
EH3204	2004 - 2008 Ford F150 Leaf Spring LIFTING eye hangers	185.16	15lbs

Compete Hanger & Shackle Kits

HS1119-4	1973 - 1991 Chevy C30 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS1120-4	1973 - 1987 Chevy C10 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS1121-4	1988 - 1998 Chevy C1500 4" Complete Hanger and Shackle Kit	173.52	20lbs

DJM Individual Parts and Prices

HS1122-4	1992 - 1998 Chevy C3500 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS1123-4	1973 - 1996 Ford F150 4" Complete Hanger and Shackle Kit	255.13	20lbs
HS1129-3	1996 - 1999 Chevy Tahoe / Suburban 3" Complete Hanger and Shackle Kit	242.98	20lbs
HS1130-4	1965 - 1972 Ford F100 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS1135-4	1973 - 1998 Ford F250/350 4" Complete Hanger and Shackle Kit	300.92	20lbs
HS1139-4	1994 - 2000 Dodge Ram 1500 4" Complete Hanger and Shackle Kit	243.04	20lbs
HS2397-5	1997 - 2002 Dodge Dakota 5" Complete Hanger and Shackle Kit	289.54	25lbs
HS2504-4	2002 - 2006 Chevy Silverado Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS2504-4X	02 - 06 Chevy Silverado X-Cab Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	266.13	20lbs
HS2598-4	2002 - 2006 Chevy Silverado Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS2598-4X	02 - 06 Chevy Silverado X-Cab Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	242.98	20lbs
HS2599-4	1999 - 2006 Chevy Silverado 4" Complete Hanger and Shackle Kit (Except 02 - 06 Long Bed, see above)	242.98	20lbs
HS2599-4X	1999 - 2006 Chevy Silverado X-Cab 4" Complete Hanger and Shackle Kit (Except 02 - 06 Long Bed, see above)	242.98	20lbs
HS2601 -5	2001 - 2010 Chevy 2500 / 3500 HD Short Bed Only 5" Complete Hanger and Shackle Kit	347.17	40lbs
HS2602-5	2001 - 2010 Chevy 1500 HD 5" Complete Hanger and Shackle Kit	347.17	40lbs
HS2603-5	2001 - 2010 Chevy 2500 / 3500 HD Long Bed Only 5" Complete Hanger and Shackle Kit	347.17	40lbs
HS2699-4	1992 - 1999 Chevy C3500 4" Complete Hanger and Shackle Kit	289.35	20lbs
HS3015-5	1999 - 2007 Ford F250/350 Superduty 5" Complete Hanger and Shackle Kit	347.17	35lbs
HS3016-3	1999 - 2004 Ford Excursion 3" Complete Hanger and Shackle Kit	347.17	35lbs
HS3097-4	1997 - 2002 Ford F150 4" Complete Hanger and Shackle Kit	242.98	20lbs

Shackles

SH1000	Lifting Shackles	69.39	5lbs
SH1009-2	1994 - 2000 Dodge Ram 1500 2" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH1011-2	1988 - 1998 Chevy C1500/2500/3500 2" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH10112-2	1973 - 1987 Chevy C10/C20/C30 2" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH1012C-2	1968 - 1972 Chevy C10 (w/ 2 1/4" wide leaf) 2" Rear Leaf Spring Shackle Kit	92.55	5lbs
SH1014-2	1973 - 1996 Ford F150 2" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH1015-2	1973 - 1996 Ford F350 2" Rear Leaf Spring Shackle Kit	92.55	5lbs
SH1016-2	1965 - 1972 Ford F100 2" Rear Leaf Spring Shackle Kit	92.55	5lbs
SH1092	2002 - 2003 Dodge 1500 Rear Leaf Spring Shackle Kit	69.39	5lbs
SH1099	1999 - 2006 Chevy Lifting Shackle	69.39	5lbs
SH2397-2	1997 - 2004 Dodge Dakota 2" Rear Leaf Spring Shackle Bracket Kit	104.13	5lbs
SH2507-2	2007 - 2015 Chevy Silverado 2" Rear Leaf Spring Shackle Kit	57.82	5lbs

DJM Individual Parts and Prices

SH2599-2	1999 - 2006 Chevy Silverado 2" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH2601-2	2001 - 2010 Chevy 1500/2500/3500 HD 2" Rear Leaf Spring Shackle Kit	115.70	5lbs
SH3001-2	1983 - 1997 Ford Ranger 1.5" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH3015-1	1999 - 2007 Ford F250/350 Superduty 1" Rear Leaf Spring Shackle Kit	115.70	5lbs
SH3016-1	2000 - 2002 Ford Excursion 1" Rear Leaf Spring Shackle Kit	115.70	5lbs
SH3097-2	1997 - 2002 Ford F150 2" Rear Leaf Spring Shackle Kit	57.82	5lbs
SH3200	2004 - 2008 Ford F150 Lifting Shackle Kit	69.40	5lbs
SH3204-2	2004 - 2014 Ford F150 2" Rear Leaf Spring Shackle Kit	86.76	5lbs
SH3215-2	2015 Ford F150 2" Rear Leaf Spring Shackle Kit	86.76	5lbs

Shock Extenders

SE1124	1973 - 1987 Chevy C10 Shock Extenders	75.19	5lbs
SE1125	1988 - 1998 Chevy C1500 Shock Extenders	75.19	5lbs
SE1128	1992 - 1999 Chevy Suburban / C3500 Shock Extenders	75.19	5lbs
SE1128S	1992 - 1999 Chevy Suburban / C3500 Shock Extenders (w/ factory rear swaybar)	75.19	5lbs
SE2000	2000 - 2004 Avalanche / Suburban / Tahoe Shock Extenders	75.19	5lbs
SE2007	2007 - 2015 Avalanche / Suburban / Tahoe Shock Extenders	75.19	5lbs
SE2599	1999 - 2006 Chevy Silverado Shock Extender	40.46	5lbs

Rear Kits

RK2000	2000 - 2006 Avalanche/Suburban/Tahoe Complete Rear Hardware Kit	196.74	15lbs
RK2007	2007 - 2015 Avalanche/Suburban/Tahoe Complete Rear Hardware Kit	196.74	15lbs
RK2007-4	2007 - 2015 Avalanche/Suburban/Tahoe Complete Rear Lowering Kit	393.49	40lbs
RK2099-4	2003 - 2006 Silverado Crew Cab (4dr) w/welded leaf spring eye hangers 4" Complete Rear Lowering Kit	318.18	40lbs
RK2099-5	2003 - 2006 Silverado Crew Cab (4dr) w/welded leaf spring eye hangers 5" Complete Rear Lowering Kit	318.18	40lbs
RK2397-6	1997 - 2002 Dodge Dakota 6" Complete Rear Lowering Kit	613.37	50lbs
RK2397-RT	1997 - 2003 Dodge Dakota RT 3" Complete Rear Lowering Kit	277.40	12lbs
RK2399	1997 - 2001 Dodge Durango 3" Complete Rear Lowering Kit	231.46	24lbs
RK2399-2	1997 - 2001 Dodge Durango 2" Complete Rear Lowering Kit	231.46	24lbs
RK2507-3	2007 - 2015 Chevy Silverado 3" Complete Rear Lowering Kit	173.48	35lbs
RK2507-4	2007 - 2015 Chevy Silverado 4" Complete Rear Lowering Kit	318.18	40lbs
RK2507-5	2007 - 2015 Chevy Silverado 5" Complete Rear Lowering Kit	318.18	40lbs
RK2507-6	2007 - 2015 Chevy Silverado 6" Complete Rear Lowering Kit	260.36	40lbs
RK2507-7	2007 - 2015 Chevy Silverado 7" Complete Rear Lowering Kit	161.19	35lbs
RK2806-3	2005 - 2007 Toyota Tacoma 3" Complete Rear Lowering Kit	277.73	35lbs
RK2808-5	2007 - 2014 Toyota Tundra 5" Complete Rear Lowering Kit	353.85	35lbs

DJM Individual Parts and Prices

RK3018	2008 - 2015 Ford Superduty 5" Complete Rear Lowering Kit	388.50	30lbs
RK3204-4	2004 - 2008 Ford F150 4" Complete Rear Lowering Kit	352.97	35lbs
RK3204-5	2004 - 2008 Ford F150 5" Complete Rear Lowering Kit	237.21	35lbs
RK3209-4	2009 - 2014 Ford F150 4" Complete Rear Lowering Kit	352.97	35lbs
RK3209-5	2009 - 2014 Ford F150 5" Complete Rear Lowering Kit	237.21	35lbs
RK3215-6	2015 Ford F150 6" Complete Rear Lowering Kit	237.21	35lbs

Pinion Shims

ACC-2PSK	2 Degree Pinion Shim Kit	24.24	3lbs
ACC-4PSK	4 Degree Pinion Shim Kit	24.24	3lbs
ACC-6PSK	6 Degree Pinion Shim Kit	24.24	3lbs
ACC-CBK	3/8" X 5" Leaf Spring Center Bolts	8.44	1lb
2PS	2 Degree Pinion Shim (Each)	11.51	1lb
4PS	4 Degree Pinion Shim (Each)	11.51	1lb
6PS	6 Degree Pinion Shim (Each)	11.51	1lb

Lowering Blocks

LB1023-3	1997 - 2001 S-10 3" Universal Block Kit w/ Steel Block Plates	49.72	10lbs
LB1023-4	1997 - 2001 S-10 4" Universal Block Kit w/ Steel Block Plates	53.19	10lbs
LB2LK	2" Universal Aluminum Lowering Block Kit (w/ u-bolts, nuts and washers)	40.46	8lbs
LB3LK	3" Universal Aluminum Lowering Block Kit (w/ u-bolts, nuts and washers)	43.94	10lbs
LB4LK	4" Universal Aluminum Lowering Block Kit (w/ u-bolts, nuts and washers)	46.24	10lbs
LB63Lk	1963 - 1972 Chevy C10 Coil Spring Rear Shim Kit	69.39	15lbs
SB1LK	1" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	15lbs
SB2LK	2" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	18lbs
SB3LK	3" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	19lbs
SB4LK	4" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	20lbs
SB2397-1	1997 - 2002 Dodge Dakota 1" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	15lbs
SB2397-1RT	1997 - 2002 Dodge Dakota RT 1" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	18lbs
SB2397-2	1997 - 2002 Dodge Dakota 2" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	20lbs
SB2397-2RT	1997 - 2002 Dodge Dakota RT 2" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	115.69	20lbs
SB2397-3	1997 - 2002 Dodge Dakota 3" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	22lbs
SB2397-3RT	1997 - 2002 Dodge Dakota RT 3" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	115.69	22lbs
SB2397-4	1997 - 2002 Dodge Dakota 4" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	23lbs
SB2397-4RT	1997 - 2002 Dodge Dakota RT 4" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	115.69	23lbs
SB2400-4	2004 - 2010 Chevy Colorado 3" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	92.55	23lbs

Shocks & Misc. Parts

Shocks (All)	CALMAX Supershocks	57.82	5lbs
10R	1 1/2" Urethane Bump Stops	23.09	1lb
10S	3/4" Urethane Bump Stops	23.09	1lb
CB15	1988 - 1998 Chevy C1500/2500/2500 Carrier Bearing Shim Kit	34.67	5lbs
CB31	1983 - 1996 Ford Ranger Carrier Bearing Shim Kit	34.67	5lbs
CB99	1999 - 2006 Chevy Silverado Carrier Bearing Shim Kit	34.67	2lbs
CM2391	1999 - 2000 Dodge 1500 Transmission Cross Member (Automatic trans)	330.69	15lbs
CM2699	2001 - 2010 Chevy 1500 / 2500 / 3500 HD Transmission Cross Member	347.22	25lbs
EL-01	Front Anti-Swaybar end link kit (for Calmax Control Arms)	23.09	1lb
EL-2000	2000 - 2015 Avalanche / Tahoe / Suburban Rear Anti-Swaybar end links	80.99	3lbs
TB2000A	2000 - 2006 Avalanche / Tahoe / Suburban Front Torsion Bar Keys	80.98	10lbs

Bushing Kits

BK2000L	Bushing and Sleeve Kit for CA2001L	38.54	1lb
BK2000U	Bushing and Sleeve Kit for CA2000U	33.02	1lb
BK2007L	Bushing and Sleeve Kit for CA2007L	38.54	1lb
BK2007U	Bushing and Sleeve Kit for CA2007U	34.67	1lb
BK2301U	Bushing and Sleeve Kit for CA2301U	33.02	1lb
BK2331L	Bushing and Sleeve Kit for CA2331L	38.54	1lb
BK2355L	Bushing and Sleeve Kit for CA2355L / CA2356L	38.54	1lb
BK2355U	Bushing and Sleeve Kit for CA2355U / CA2356U	38.54	1lb
BK2391L	Bushing and Sleeve Kit for CA2391L / CA2390L	40.51	1lb
BK2391U	Bushing and Sleeve Kit for CA2391U / CA2390U	34.67	1lb
BK2392L	Bushing and Sleeve Kit for CA2392L	40.45	1lb
BK2397L	Bushing and Sleeve Kit for CA2397L	40.46	1lb
BK2400L	Bushing and Sleeve Kit for CA2400L	40.46	1lb
BK2555L	Bushing and Sleeve Kit for CA2555L	40.46	1lb
BK2555U	Bushing and Sleeve Kit for CA2555U	34.67	1lb
BK2599L	Bushing and Sleeve Kit for CA2599L	40.46	1lb
BK2599U	Bushing and Sleeve Kit for CA2599U	34.67	1lb
BK2601L	Bushing and Sleeve Kit for CA2602L	40.46	1lb
BK2699L	Bushing and Sleeve Kit for CA2699L	40.46	1lb
BK2699U	Bushing and Sleeve Kit for CA2699U	34.67	1lb

DJM Individual Parts and Prices

<i>BK2806L</i>	<i>Bushing and Sleeve Kit for CA2806L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK2806U</i>	<i>Bushing and Sleeve Kit for CA2806U</i>	<i>34.67</i>	<i>1lb</i>
<i>BK2808L</i>	<i>Bushing and Sleeve Kit for CA2808L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK2895U</i>	<i>Bushing and Sleeve Kit for CA2895U</i>	<i>34.67</i>	<i>1lb</i>
<i>BK3000</i>	<i>Bushing and Sleeve Kit for Dream Beams</i>	<i>39.95</i>	<i>1lb</i>
<i>BK3004</i>	<i>Bushing and Sleeve Kit for King Pin Dream Beams</i>	<i>39.95</i>	<i>1lb</i>
<i>BK3097L</i>	<i>Bushing and Sleeve Kit for CA3097L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK3097U</i>	<i>Bushing and Sleeve Kit for CA3097U</i>	<i>34.67</i>	<i>1lb</i>
<i>BK3098L</i>	<i>Bushing and Sleeve Kit for CA3098L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK3098U</i>	<i>Bushing and Sleeve Kit for CA3098U</i>	<i>34.67</i>	<i>1lb</i>
<i>BK3205L</i>	<i>Bushing and Sleeve Kit for CA3205L / CA3209L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK3214L</i>	<i>Bushing and Sleeve Kit for CA3214L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK3215L</i>	<i>Bushing and Sleeve Kit for CA3215L</i>	<i>40.46</i>	<i>1lb</i>
<i>BK1011</i>	<i>Bushing and Sleeve Kit for Shackles</i>	<i>40.46</i>	<i>1lb</i>

LIMITED LIFETIME WARRANTY

DJM Suspension warrants to the original retail purchaser, that DJM products are free from defects in craftsmanship and materials for as long as the original retail purchaser owns the vehicle on which DJM products are installed. (Excluding ball joints and bushings which have a 90 day warranty). **KEEP YOUR RECEIPT!** In the event of any warranty claim you must provide DJM with a copy of the original receipt.

This warranty does not apply to any product that has been modified, or subject to accident, abuse, or misuse.

This warranty is limited to the repair or replacement, at DJM's discretion, of the defective product. Any cost of labor, freight, incidental or consequential damages are expressly excluded from this warranty.

In order to return DJM products for warranty consideration, refer to merchandise return statement.

MERCHADISE RETURNS

Merchandise may not be returned unless accompanied by a copy of the original invoice and return authorization number (RGA) issued by DJM Suspension. RGA # must appear on all returned packages. No returns after 30 days. Refunds only on merchandise that is unused and in the original cartons. All returns are subject to a 20% restocking fee. Shipping charges are non-refundable. Freight on returns must be prepaid. All C.O.D. or collect shipments will be refused.

DJM ACCESSORIES

Sometimes you need something that you just can't find! Maybe you need to refurbish a used part or replace a worn item. Here is where you can find things like ball joints, pinion shim kits, grease, bushings, etc. Genuine DJM parts. That's the DJM difference!



U-Bolt Kits



Shim Kits



Bump Stops



Ball Joints



Block Kits



End Links

CALMAX SUPERSHOCKS

SuperShocks are the best gas shock for lowered trucks and suv's you can buy!
Each DJM lowering kit has a CALMAX SuperShock designed to optimize your ride quality and performance



Use this chart to find a custom shock that's right for you!

Tech Tip: Twin Tube shocks need to be installed with the shaft end up!

Part Number	Extended Length	Collapsed Length	Upper Mount	Lower Mount
1115	11.5"	8.0"	Stem	Loop
1309	13.5"	9.25"	Loop	Loop
1315	13.5"	9.0"	Stem	Loop
1409	14.5"	9.25	Loop	Loop
1415	14.5	9.0"	Stem	Loop
1509	15.5"	10.25"	Loop	Loop
1700	17.5"	10.75"	Loop	Loop
1800	18.5"	11.75"	Loop	Loop
1900	19.5"	12.25"	Loop	Loop
1910	19.5"	12.0"	Stem	Loop
2000	20.5"	12.75	Loop	Loop
2015	20.5"	12.0"	Stem	Loop
2100	21.5"	13.25"	Loop	Loop
2200	22.5"	13.25"	Loop	Loop
2215	22.5"	13.75	Stem	Loop
2400	24.5"	14.75	Loop	Loop



GENUINE DJM



Genuine DJM parts are designed, built and packaged for you, right here in Gardena CA. R&D, Production and Shipping, all in one location, gives us quality control we pass on to you. It's Genuine DJM

DJM Suspension
580 West 184th Street
Gardena, CA 90248

310-538-1583
tech@djmsuspension.com
orders@djmsuspension.com

DJMSUSPENSION.COM