


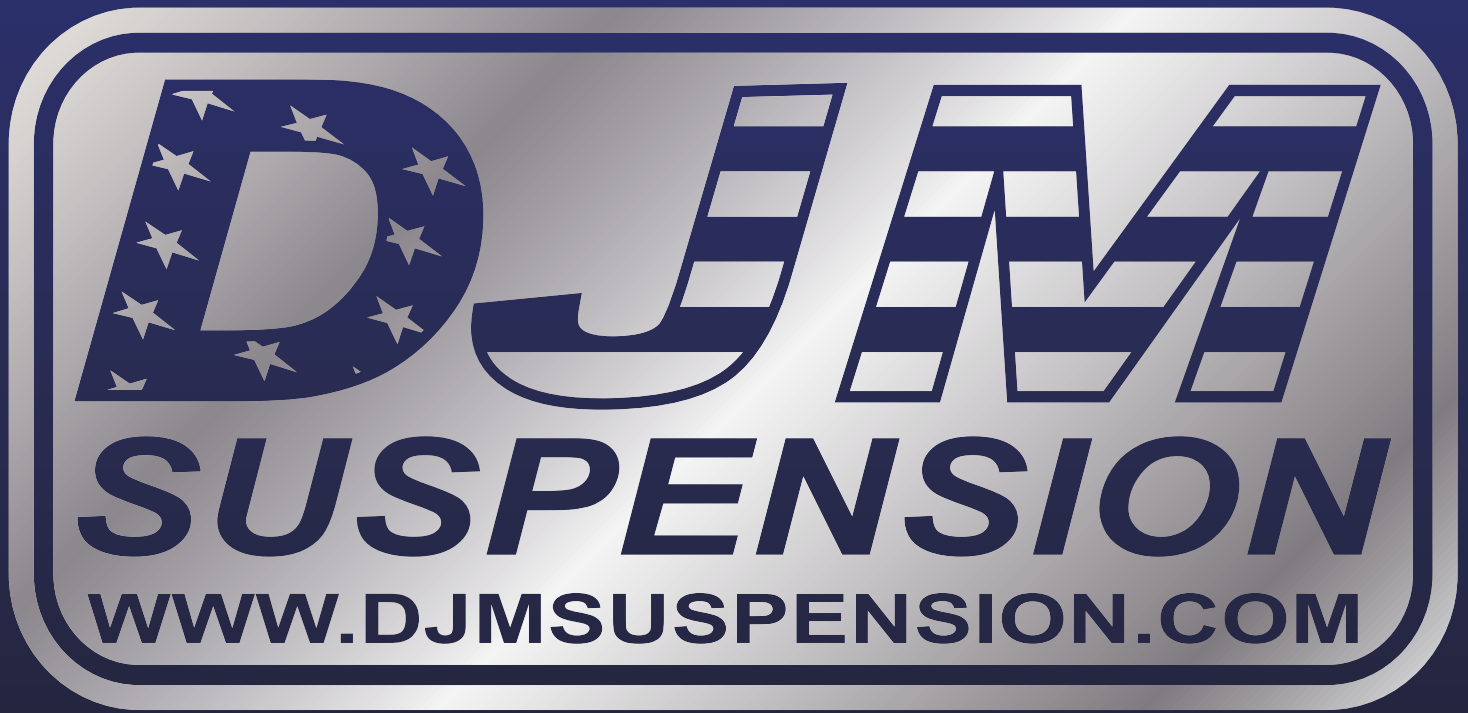

2020 CATALOG

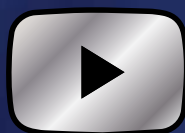




Table of Contents

Chevy	1
Ford	19
Dodge	24
Imports	25
Individual Parts	27

Fast Definitions of Catalog Prefixes

ACC	<i>Pinion Shim Kits (for rear axle w/ leaf spring)</i>
ASB	<i>Anti Sway-Bars</i>
BK	<i>Replacement Bushing Kits (Control Arms)</i>
CA	<i>CALMAX Control Arms</i>
CB	<i>Carrier Bearing Shim Kits</i>
CM	<i>Transmission Crossmembers</i>
CS	<i>Coil Springs</i>
DB	<i>Dream Beams (Ford I-Beams)</i>
DJM	<i>Complete DJM lowering Kits</i>
DS	<i>Drop Spindles</i>
EH	<i>Leaf Spring Eye Hangers</i>
EL	<i>End Links (for anti sway-bars)</i>
FK	<i>Complete Flip Kits</i>
HS	<i>Hanger / Shackle Kits (leaf spring rear ends)</i>
K	<i>One box complete kits</i>
LB	<i>Aluminum Lowering Block Kits</i>
RK	<i>Complete Rear Kits</i>
SB	<i>Steel Lowering Block Kits</i>
SE	<i>Shock Extenders</i>
SH	<i>Leaf Spring Shackle Kits</i>



**Follow us on youtube and instagram for more tips, tricks
and news for your lowered truck!**



Go to djmsuspension.com for pricing

We have changed the powder coating of our DJM Suspension parts. They are now black, improved durability and delivery. Plus easy touch up after installation is easy.

www.djmsuspension.com



DJM Control Arms

Seamless DOM tubular construction makes DJM Control Arms strong, with durable powder coating finish they are attractive and tough. All steel ball joints installed with urethane bushings and drops from 2" all the way to 5" using factory coils.



DJM Dream Beams

"Strongest and Most Accurate Lowering Beam Anywhere" That's what the magazines say about our Dream Beam systems for Fords with the "Twin I-Beam Suspension". Starting in 1965 Ford has been using this rugged, durable suspension and they still use it in their SuperDuty platforms. What separates us from the other guys is the tubular design.



DJM Dropped Spindles

Manufactured from high quality ductile iron and machined by computer controlled mills. "Without a doubt the toughest spindle in the aftermarket business" is how the magazines described DJM dropped spindles, and we of course agree.



Flip Kits

Being able to move the rear axle from the bottom of a leaf spring to the top is called a flip kit. Actually nothing is "flipped" just moved, and this gives you from 4" to 8" of drop. It all depends on the thickness of the leaf spring pack. For the deep drop this is the ticket, you get more drop and better performance this way than say a lowered leaf.



Universal Lowering Blocks

Commonly known as "Universal Lowering Blocks", these babies will fit any truck with 2 1/2" wide leaf springs with the axle on top of the leaf springs. The cast aluminum blocks are made in 2", 3" and 4" flavors with the 4" blocks sporting a built in pinion correction angle. All steel blocks also have a 1" kit. They are placed between your axle and the leaf spring and it lowers your truck by spacing your axle up towards the bottom of your truck. All Universal Lowering Block kits come complete with high strength U-bolts with rolled threads, lock washers and nuts.



Rear Kits

The new trucks and SUVs have made changes in their rear suspensions, coils spring rears, welded on leaf spring hangers, box designed frames, etc. We've designed "Rear Kits" hybrid type kits using parts from all the traditional ways of lowering to give you options when it comes to lowering the new, modern rigs being built today. They could have coil springs, shock extenders, frame C-sections, axle brackets, lowering blocks, trailing arm brackets and more. What ever you need!



Hanger & Shackle Kits

For modest rear drops you should consider kits that are called Hanger and Shackle Kits, they move where the leaf spring mounts to the frame up towards the bed. This pulls the rear axle up or drops the rear of your truck. Unlike a flip kit, you don't move the rear axle relative to the leaf spring. You typically get from 3" to 5" of drop with these kits.



Torsion Bar Keys


On trucks that have torsion bars instead of coils springs you can lower by changing the "key" the torsion bar seats in. The lowering key re-indexes where the designed load of the torsion bar sets.



Coil Springs

Coil Springs are special, their dynamic, while other parts may pivot one way or another, coil springs actually are compressed to a shorter length and expand beyond their static length, and are responsible for setting the ride height of your truck! Are coil springs important?

You bet, sometimes the stock coil springs are your best choice, sometimes engineered lowering coils are all you need!

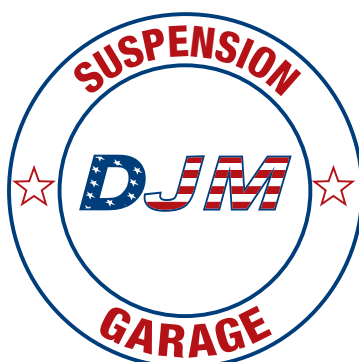

COMPLETE DJM KITS

You can build a radical engine by combining parts made by different manufactures, but you really have know what you're doing! The same thing is true when it comes to suspension parts!

There are more suspension parts for a Chevy than you can shake a stick at.

With that thought, keep in mind advanced installers and experienced shops have done enough suspension work to know which parts you can combine without bad side effects to get "the look". And really, their knowledge came from doing it wrong sometime in the past. So if you want to do your own work and you're not an expert, seriously consider buying a complete suspension kit. The parts in kits are designed to work together in an optimum way, with out nasty surprises. You won't have to buy any more parts to finish your job (suspension that is) and get to driving around! While it is fun to fool around in the garage, it's more fun to drive!

PART #	DESCRIPTION	BALL JOINT	OE
CA2000U	2000-2001 CHEVY SUBURBAN/TAHOE	6124	NO
CA2355U	1963-1970 CHEVY 1/2 TON 5 LUG	6024	YES
CA2356U	71-72 CHEVY 1/2 TON 5/6 LUG	6124	YES
CA2390U	2000 DODGE 1500 UPPER CONTROL ARM	7206	NO
CA2391U	1994-1999 DODGE 1500 5 LUG	7206	YES
CA2455U	73-67 CHEVY C 10 1/2 TON 5 LUG	6136	YES
CA2555U	1988-1998 CHEVY 1500 5 LUG	6370	YES
CA2599U	1999 CHEVY 1500	6124	NO
CA2655U	73-87 GM UPPER ARMS	6122	YES
CA2699U	2001 CHEVY HD	6292	NO
CA3097U	1997-2000 FORD F150	6370	NO
CA3098U	1998-2000 FORD RANGER	8738	YES
CA3197U	1997-2000 FORD EXPEDITION	6370	NO



LOWER

UPPER

BALL JOINTS

PART #	DESCRIPTION	BALL JOINT	OE
CA2001L-3	CHEVY SUBURBAN/TAHOE	8541	NO
CA2331L-3	82-00 CHEVY S10/S15/BLAZER	6145	YES
CA2356L-3	1971-1987 CHEVY 1/2 TON 5 LUG	6117	YES
CA2390L-4	2000 DODGE 1500 LOWER CONTROL	7201	NO
CA2391L-4	1994-1999 DODGE 1500 5 LUG	7201	YES
CA2392L-2	2002-2004 DODGE 1500	8695	NO
CA2392L-3	2002-2004 DODGE 1500	8695	NO
CA2397L-2	DAKOTA/DURANGO 2" LOWER	8413	NO
CA2397L-3	DAKOTA/DURANGO 3" LOWER	8413	NO
CA2400L-3	2004-2005 COLORADO		
CA2455L-3	73-87 CHEVY C10 1/2 TON 5 LUG	6117	YES
CA2555L-2	1988-1998 CHEVY 1500, 5 LUG	6293	YES
CA2555L-3	1988-1998 CHEVY 1500, 5 LUG	6293	YES
CA2555L-4	1998-1998 CHEVY 1500, 5 LUG	6293	YES
CA2599L-2	1999-2005 CHEVY 1500	6541	NO
CA2599L-3	1999-2005 CHEVY 1500	6541	NO
CA2599L-4	1999-2005 CHEVY 1500	6541	NO
CA2599L-5	1999-2005 CHEVY 1501	6541	NO
CA2602L-3	2001-2005 CHEVY HD	6541	NO
CA2655L-3	1973-1997 CHEVY C30 (8 LUG)	6129T	YES
CA2656L-3	63-70 GM 3" LOWER ARMS (8 LUGS)	6025	YES
CA2699L-6	2001-2005 CHEVY HD	6541	NO
CA3097L-4	1997-2000 FORD F 150	8695	YES
CA3098L-4	1998 FORD RANGER	8771	YES
CA3197L-4	1997-2000 FORD EXPEDITION	8695	YES
CA3205L-2	2004 F 150	8695	NO
CA3205L-3	2004 F150	8695	NO



DJM SuperShocks

Use this chart to find a custom shock that's right for you!

Part Number	Extended Length	Collapsed Length	Upper Mount	Lower Mount
1115	11.5"	8.0"	Stem	Loop
1309	13.5"	9.25"	Loop	Loop
1315	13.5"	9.0"	Stem	Loop
1409	14.5"	9.25"	Loop	Loop
1415	14.5"	9.0"	Stem	Loop
1509	15.5"	10.25"	Loop	Loop
1700	17.5"	10.75"	Loop	Loop
1800	18.5"	11.75"	Loop	Loop
1900	19.5"	12.25"	Loop	Loop
1910	19.5"	12.0"	Stem	Loop
2000	20.5"	12.75"	Loop	Loop
2015	20.5"	12.0"	Stem	Loop
2100	21.5"	13.25"	Loop	Loop
2200	22.5"	13.25"	Loop	Loop
2215	22.5"	13.75"	Stem	Loop
2400	24.5"	14.75"	Loop	Loop



Tech Tip: Twin Tube shocks need to be installed with the shaft end up!

Performance and safety are very good reasons to have the best shocks you can buy. Having the correct shock length combined with proper valving make Calmax SuperShocks the best choice for lowered trucks and suv's.

CHEVY



Astro/Safari 1982-1995 *Composite Rear Leaf Spring*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM1027-2/3	CS2371-2	FK1027-3	1315 / 1900

Astro/Safari 1995-2000 *All Steel Rear Leaf Spring*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM1027-2/3	CS2371-2	FK1027-97	1315 / 1900

Avalanche 2001 - 2006

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	DJM2000-0/2	NA	CS2000R-2 SE2000	Factory
3" Front / 3" Rear	DJM2000-3/3	CA2001L-3D CA2001L-3P * Ball Joint # 6541 Bushing Kit # BK2001L	CS2000R-3 RK2000	1315 / 2000
3" Front / 5" Rear	DJM2000-3/5	CA2001L-3D CA2001L-3P * Ball Joint # 6541 Bushing Kit # BK2001L	CS2000R-5 RK2000	1315 / 1800

CHEVY

Avalanche 2007 - 2014

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	DJM2007-0/2	NA	CS2007R-2 SE2007	Factory
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2000
2" Front / 3" Rear	DJM2007-2/3	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	CS2007R-3 RK2007	Factory / 2000
2" Front / 4" Rear	DJM2007-2/4	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	RK2007-4	Factory / 2000
3" Front / 4" Rear	DJM2007-3/4	CA2007-3 * Ball Joint Upper Arm # 6124 Lower Arm # 6541 Bushing Kits Upper # BK2007U Lower # BK2007L	RK2007-4	Factory / 2000

C-10 1963 - 1972 With Coil Spring Rear

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2354-2/3	CS3253-2	CS2354R-3	1309 / 1800
2" Front / 4" Rear	DJM2354-3/4	CS2353-3	CS2354R-4	1309 / 1800
2" Front / 4" Rear	DJM2355-3/4	CA2355L-3 (drum brakes) * Ball Joint # 6023 Bushing Kit # BK2355L	CS2354R-4	1409 / 1800
5" Front / 5" Rear	DJM2355-5/5	CA2355L-3 CS2353-2 * Ball Joint # 6023 Bushing Kit # BK2355L	CS2354R-4 LB63LK	1309 / 1800
5" Front / 5" Rear	DJM2355-5/5+	CA2355L-3 + CA2355U CS2353-2 * Ball Joint # 6024-Upp 6023-Low Bushing Kit # BK2355L BK2355U	CS2354R-4 LB63LK	1309 / 1800

CHEVY

C-10 1968 - 1972 *With 2.25" Rear Leaf Spring*

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SH1012C-2	1409 / 2000
3" Front / 5" Rear	DJM1012-3/5	CS2353-3	FK1012-5	1309 / 2100
3" Front / 5" Rear	DJM1055-3/5	CA2355L-3 (drum brakes) * Ball Joint # 6023 Bushing Kit # BK2355L	FK1012-5	1409 / 2100
3" Front / 5" Rear	DJM1056-3/5	CA2356L-3 (disc brakes) * Ball Joint # 6117 Bushing Kit # BK2355L	FK1012-5	1409 / 2100
5" Front / 5" Rear	DJM1055-5/5	CA2355L-3 + CS2353-2 (drum brakes) * Ball Joint # 6024-Upp 6023-Low Bushing Kit # BK2355L BK2355U	FK1012-5	1309 / 2100
5" Front / 5" Rear	DJM1056-5/5	CA2356L-3 + CS2353-2 (disc brakes) * Ball Joint # 6117 Bushing Kit # BK2356L	FK1012-5	1309 / 2100

C-10 1971 - 1972 *With Disc Brake front & Coil Spring Rear*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2354-2/3	CS2353-2	CS2354R-3	1409 / 1800
3" Front / 4" Rear	DJM2354-3/4	CS2353-3	CS2354R-4	1309 / 1800
3" Front / 4" Rear	DJM2356-3/4	CA2356L-3 * Ball Joint # 6117 Bushing Kit # BK2356L	CS2354R-4	1409 / 1800

C-10 1971 - 1972 *With Disc Brake front & Coil Spring Rear*

Amount of Drop	Complete Kits	Front	Rear	Shocks
5" Front / 5" Rear	DJM2356-5/5	CA2356L-3 CS2353-2 * Ball Joint # 6117 Bushing Kit # BK2356L	CS2354R-4 LB63LK	1309 / 1800
5" Front / 5" Rear	DJM2356-5/5+	CA2356L-3 + CA2356U CS2353-2 * Ball Joint # 6117-Low 6124-Upper Bushing Kit # BK2356L BK2356U	CS2354R-4 LB63LK	1309 / 1800

CHEVY

C-10 1973 - 1987

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SH1012-2	1409 / 2400
2" Front / 4" Rear	DJM1120-2/4	CS2353-2	HS1120-4	1309 / 2200
3" Front / 4" Rear	DJM1120-3/4	CS2353-3	HS1120-4	1309 / 2200
3" Front / 4" Rear	DJM2045L-3/4	DS2045L-3 (1" rotor)	HS1120-4	1409 / 2200
3" Front / 4" Rear	DJM2045H-3/4	DS2045H-3 (1.25" rotor)	HS1120-4	1409 / 2200
3" Front / 4" Rear	DJM2456-3/4	CA2356L-3 * Ball Joint #6117 Bushing Kit #BK2356L	HS1120-4	1409 / 2200
3" Front / 5" Rear	DJM2353-3/5	CS2353-3	FK1024-5	1309 / 2100
3" Front / 5" Rear	DJM2353-3/5 LTD	CS2353-3	FK1024-LTD	1309 / 2100
3" Front / 5" Rear	DJM2045L-3/5	DS2045L-3 (1" rotor)	FK1024-5	1409 / 2100
3" Front / 5" Rear	DJM2045L-3/5 LTD	DS2045L-3 (1" rotor)	FK1024-LTD	1409 / 2100
3" Front / 5" Rear	DJM2045H-3/5	DS2045H-3 (1.25" rotor)	FK1024-5	1409 / 2100
3" Front / 5" Rear	DJM2045H-3/5 LTD	DS2045H-3 (1.25" rotor)	FK1024-LTD	1409 / 2100
3" Front / 5" Rear	DJM2456-3/5	CA2356L-3 * Ball Joint #6117 Bushing Kit #BK2356L	FK1024-5	1409 / 2100
3" Front / 5" Rear	DJM2456-3/5 LTD	CA2356L-3 * Ball Joint #6117 Bushing Kit #BK2356L	FK1024-LTD	1409 / 2100

CHEVY

C-10 1973 - 1987

Amount of Drop	Complete Kits	Front	Rear	Shocks
5" Front / 5" Rear	DJM2045L-5/5	DS2045L-3 (1"rotor) CS2353-2	FK1024-5	1309 / 2100
5" Front / 5" Rear	DJM2045L-5/5 LTD	DS2045L-3 (1"rotor) CS2353-2	FK1024-LTD	1309 / 2100
5" Front / 5" Rear	DJM2045H-5/5	DS2045H-3 (1.25"rotor) CS2353-2	FK1024-5	1309 / 2100
5" Front / 5" Rear	DJM2045H-5/5 LTD	DS2045H-3 (1.25"rotor) CS2353-2	FK1024-LTD	1309 / 2100
5" Front / 5" Rear	DJM2456-5/5	CA2356L-3 CS2353-2 * Ball Joint #6117 Bushing Kit #BK2356L	FK1024-5	1309 / 2100
5" Front / 5" Rear	DJM2456-5/5 LTD	CA2356L-3 CS2353-2 * Ball Joint #6117 Bushing Kit #BK2356L	FK1024-LTD	1309 / 2100

C20 / C30 1973 - 1991 8 - Lug Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM2655-3/4	CA2655L-3 * Ball Joint # 6129 Bushing kit # BK2655L	HS1119-4	1409 / 1800

C2500 / C3500 1992 - 1999 8 - Lug Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SH1011-2	1415 / 2400
2" Front / 4" Rear	DJM2352-2/4	CS2352-2	HS2699-4	1315 / 2200
3" Front / 4" Rear	DJM2057-3/4	DS2057-3	HS2699-4	1315 / 2200
5" Front / 7" Rear	DJM2057-5/7	DS2057-3 CS2352-2	FK1026-7	1315 / 2200 +2000

CHEVY

Heavy Duty 1500 2001 - 2010 (1500 HD)

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 5" Rear	DJMEH2602-3/5	CA2602L-3D CA2602L-3P * Ball Joint #6541 Bushing Kit #BK2602L	HS2602-5	1415 / 2200 + 2400
6" Front / 8" Rear	DJM2699-6/8	CA2699L-6D CA2699L-6P CA2699U * Ball Joint # 6541-Low 6370-Upp Bushing Kit # BK2699L BK2699U	FK2699-8 CM2699	1415 / 1700 +1800

The HD Series from Chevy have different leaf spring eye hangers depending on the model
Whats important here is you have a 1500 HD and your eye hanger bracket looks like this.



Heavy Duty 2500 / 3500 2001 - 2010 Long Bed Only

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 5" Rear	DJMEH2601-3/5	CA2602L-3D CA2602L-3P * Ball Joint #6541 Bushing Kit #BK2602L	HS2601-5	1415 / 2200 + 2400
6" Front / 8" Rear	DJM2699-6/8	CA2699L-6D CA2699L-6P CA2699U * Ball Joint # 6541-Low 6370-Upp Bushing Kit # BK2699L BK2699U	FK2699-8 CM2699	1415 / 1700+1800

The HD series from Chevy have different leaf spring eye hangers depending on the model
What's important here is you have a 2500 / 3500 LONG BED HD and your eye hanger bracket looks like this.



Heavy Duty 2500 / 3500 2001 - 2010 Short Bed Only

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 5" Rear	DJMEH2603-3/5	CA2602L-3D CA2602L-3P * Ball Joint # 6541 Bushing Kit # BK2602L	HS2603-5	1415 / 2200 + 2400
6" Front / 8" Rear	DJM2699-6/8	CA2699L-6D CA2699L-6P CA2699U * Ball Joint # 6541- Low 6370- Upp Bushing Kit #BK2699L BK2699U	FK2699-8 CM2699	1415 / 1700+1800

The HD series from Chevy have different leaf spring eye hangers depending on the model
What's important here is you have a 2500 / 3500 SHORT BED HD and your eye hanger bracket looks like this.



CHEVY

Colorado / Canyon 2004 - 2011

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SB2400-2	Factory / 2100
2" Front / 3" Rear	DJM2400-2/3	CS2400-2	SB2400-3	Factory / 2100
3" Front / 4" Rear	DJM2400-3/4	CA2400L-3 * Balljoint is OEM Bushing Kit # BK2400L	SB2400-4	Factory / 2100

S-10 / S15 Pick Up 1982 -2004 S-10 Blazer / Jimmy 1982 - 1997

Note: For 1997 and newer S-10 Pick Ups/Blazers, etc. use part number LB1023-3 for 3" Block Kit, or LB1023-4 for 4" Block Kit

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	LB2LK	1315 / 2400
1" Front / 2" Rear	DJM2321-1/2	CS2321-2	LB2LK	1315 / 2400
2" Front / 3" Rear	DJM2321-2/3	CS2321-2	LB3LK	1315 / 2400
2" Front / 3" Rear	DJM2031-2/3	DS2031-2	LB3LK	1315 / 2400
3" Front / 4" Rear	DJM2321-3/4	CS2321-3	LB4LK	1315 / 2400
3" Front / 4" Rear	DJM2331-3/4	CA2331L-3 * Ball Joint # 6145 Bushing Kit # BK2311L	LB4LK	1315 / 2400
3" Front / 4" Rear	DJM2031-3/4	DS2031-2 CS2321-1	LB4LK	1315 / 2400
4" Front / 4" Rear	DJM2031-4/4	DS2031-2 CS2321-2	LB4LK	1315 / 2400

S-10 Blazer / Jimmy 1998 - 2003

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM2321-2/2	CS2321-2	LB2LK / 1023-BP	1315 / 2400
3" Front / 3" Rear	DJM2321-3/3	CS2321-3	LB3LK / 1023-BP	1315 / 2400

CHEVY

C1500 Silverado / Sierra 1988 - 1991 *Standard CabW Only (Excluding 45445)*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM2351-2/4	CS2351-2	HS1121-4	1315 / 2200
2" Front / 4" Rear	DJM2351-V6	CS2351-V6	HS1121-4	1315 / 2200
2" Front / 4" Rear	DJM2555-2/4	CA2555L-2 * Ball Joint # 6293 Bushing Kit # BK2555L	HS1121-4	1415 / 2200
2" Front / 4" Rear	DJM2055-2/4	DS2055-2 AxleLength = 4.25' Axle OD @ Innern bearing 1.25'	HS1121-4	1415 / 2200
3" Front / 4" Rear	DJM2351-3/4	CS2351-3	HS1121-4	1315 / 2200
3" Front / 4" Rear	DJM2555-3/4	CA2555L-3 * Ball Joint # 6293 Bushing Kit # BK2555L	HS1121-4	1415 / 2200
4" Front / 6" Rear	DJM2555-4/6	CA2555L-4 CS2351-2 * Ball Joint # 6293 Bushing Kit # BK2555L	FK1025-6	1315 / 2000 + 2200
4" Front / 6" Rear	DJM2555-4/6+	CA2555L-4 + CA2555U CS2351-2 * Ball Joint # 6293-Low 6370-Upp Bushing Kit # BK2555L BK2555U	FK1025-6	1315 / 2000 + 2200
4" Front / 6" Rear	DJM2055-4/6	DS2055-2 CS2351-2 AxleLength = 4.25' Axle OD @ Innern bearing 1.25'	FK1025-6	1315 / 2000 + 2200

C1500 Silverado / Sierra 1992 - 1998 *All EXCEPT ... 88-91 Standard Cab*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM2351-2/4	CS2351-2	HS1121-4	1315 / 2200
3" Front / 4" Rear	DJM2555-2/4	CA2555L-2 * Ball Joint # 6293 Bushing Kit # BK555L	HS1121-4	1415 / 2200
2" Front / 4" Rear	DJM2056-2/4	DS2056-2 AxleLength = 4.50' Axle OD @ Innern bearing 1.375'	HS1121-4	1415 / 2200
2" Front / 4" Rear	DJM2351-V6	CS2351-V6	HS1121-4	1315 / 2200
3" Front / 4" Rear	DJM2351-3/4	CS2351-3	HS1121-4	1315 / 2200
3" Front / 4" Rear	DJM2555-3/4	CA2555L-3 * Ball Joint # 6293 Bushing Kit # BK2555L	HS1121-4	1415 / 2200
4" Front / 6" Rear	DJM2555-4/6	CA2555L-4 CS2351-2 * Ball Joint # 6293 Bushing Kit # BK2555L	FK1025-6	1315 / 2000 + 2200
4" Front / 6" Rear	DJM2555-4/6+	CA2555L-4 + CA2555U CS2351-2 * Ball Joint # 6293-Low 6370-Upp Bushing Kit # BK2555L BK2555U	FK1025-6	1315 / 2000 + 2200
4" Front / 6" Rear	DJM2056-4/6	DS2056-2 CS2351-2 AxleLength = 4.50' Axle OD @ Innern bearing 1.375'	FK1025-6	1315 / 2000 + 2200

CHEVY

Silverado / Sierra 1999 - 2006 2WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM2399-2/4	CS2599-2	HS2599-4	1415 / 1900 + 2000
2" Front / 4" Rear	DJM2599-2/4	CA2599L-2 * Ball Joint # 6541 Bushing Kit # BK2599L	HS2599-4	1415 / 1900 + 2000
3" Front / 4" Rear	DJM2599-3/4	CA2599L-3 * Ball Joint # 6541 Bushing Kit # BK2599L	HS2599-4	1415 / 1900 + 2000
3" Front / 5" Rear	DJM2599-3/5	CA2599L-3 * Ball Joint # 6541 Bushing Kit # BK2599L	FK2599-6 SH1099	1415 / 1900 + 2000
4" Front / 6" Rear	DJM2599-4/6	CA2599L-4 * Ball Joint # 6541 Bushing Kit # BK2599L	FK2599-6	1415 / 1800 + 1900
4" Front / 6" Rear	DJM2599-4/6+	CA2599L-4 CA2599U * Ball Joint # 6124-Upp 6541-Low Bushing Kit # BK2599L BK2599U	FK2599-6	1415 / 1800 + 1900
5" Front / 7" Rear	DJM2599-5/7+	CA2599L-5 CA2599U * Ball Joint # 6124- Upp 6541- Low Bushing Kit # BK2599L BK2599U	FK2599-7	1415 / 1800 + 1900

Silverado / Sierra 1999 - 2006 4WD + 2WD Torsion Bar Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM2001-3/4	CA2001L-3D CA2001L-3P * Ball Joint # 6541 Bushing Kit # BK2001L	HS2599-4	1415 / 1900 + 2000
3" Front / 5" Rear	DJM2199-3/5	CA2001L-3D CA2001L-3P * Ball Joint # 6541 Bushing Kit # BK2001L	FK2599-6 SH1099	1415 / 1800 + 1900

CHEVY

Silverado / Sierra 2003 - 2006

Crew Cab 4DR With leaf spring eye hangers welded to the frame

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM2099-2/2	CS2599-2	SH2599-2	1415 / 2200
2" Front / 2" Rear	DJM2599-2/2	CA2599L-2 * Ball Joint # 6541 Bushing Kit # BK2599L	SH2599-2	1415 / 2200
2" Front / 4" Rear	DJM2099-2/4	CS2599-2	RK2099-4	1415 / 1900 + 2000
2" Front / 4" Rear	DJM2999-2/4	CA2599L-2 * Ball Joint # 6541 Bushing Kit # BK2599L	RK2099-4	1415 / 1900 + 2000
3" Front / 4" Rear	DJM2999-3/4	CA2599L-3 * Ball Joint # 6541 Bushing Kit # BK2599L	RK2099-4	1415 / 1900 + 2000
3" Front / 5" Rear	DJM2999-3/5	CA2599L-3 * Ball Joint # 6541 Bushing Kit # BK2599L	RK2099-5	1415 / 1900 + 2000
4" Front / 6" Rear	DJM2999-4/6	CA2599L-4 * Ball Joint # 6541 Bushing Kit # BK2599L	FK2599-6X	1415 / 1800 + 1900

Silverado / Sierra 2002 -2006 *Long Bed Only*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJMEH2598-2/4S	CS2599-2	HS2598-4	1415 / 1900 + 2000
2" Front / 4" Rear	DJMEH2598-2/4C	CA2599L-2 * Ball Joint # 6541 Bushing Kit # BK2599L	HS2598-4	1415 / 1900 + 2000
2" Front / 4" Rear	DJMEH2599-2/4S	CS2599-2	HS2599-4	1415 / 1900 + 2000
2" Front / 4" Rear	DJMEH2599-2/4C	CA2599L-2 * Ball Joint # 6541 Bushing Kit # BK2599L	HS2599-4	1415 / 1800 + 1900
3" Front / 5" Rear	DJM2599-3/5	CA2599L-3 * Ball Joint # 6541 Bushing Kit # BK2599L	FK2599-6 SH1099	1415 / 1800 + 1900
4" Front / 6" Rear	DJM2599-4/6	CA2599L-4 * Ball Joint # 6541 Bushing Kit # BK2599L	FK2599-6	1415 / 1800 + 1900
4" Front / 6" Rear	DJM2599-4/6+	CA2599-4 CA2599U * Ball Joint # 6541-Low 6124-Upp Bushing Kit # BK2599L BK2599U	FK2599-6	1415 / 1800 + 1900
5" Front / 7" Rear	DJM2599-5/7+	CA2599-5 CA2599U * Ball Joint # 6124- Upp 6541 - Low Bushing Kit # BK2599L BK2599U	FK2599-7	1415 / 1800 + 1900

CHEVY

Silverado / Sierra 2007 - 2015

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SH2507-2	Factory / 2400
0" Front / 3" Rear	NA	NA	RK2507-3	Factory / 2200
2" Front / 3" Rear	DJM2510-2/3 Works on 4WD's!	CS2007F-2	RK2507-3	Factory / 2200
2" Front / 4" Rear	DJM2510-2/4 Works on 4WD's!	CS2007F-2	RK2507-4	Factory / 2200
2" Front / 3" Rear	DJM2507-2/3 Works on 4WD's!	CA2007L-2	RK2507-3	Factory / 2200
2" Front / 4" Rear	DJM2507-2/4 Works on 4WD's!	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	RK2507-4	Factory / 2200
3" Front / 4" Rear	DJM2507-3/4	CA2007-3 * Ball Joint # Upper 6124 Lower 6541 Bushing Kit # Upper BK2007U Lower BK2007L	RK2507-4	Factory / 2200
3" Front / 5" Rear	DJM2507-3/5	CA2007-3 * Ball Joint # Upper 6124 Lower 6541 Bushing Kit # Upper BK2007U Lower BK2007L	RK2507-5	Factory / 2100
4" Front / 6" Rear	DJM2507-4/6	CA2507-4 * Ball Joint # Upper 6124 Lower 6541 Bushing Kit # Upper BK2007U Lower BK2007L	RK2507-6	Factory / 1900
4" Front / 7" Rear	DJM2507-4/7	CA2507-4 * Ball Joint # Upper 6124 Lower 6541 Bushing Kit # Upper BK2007U Lower BK2007L	RK2507-7	Factory / 1800

CHEVY

Cast
Aluminum



The 2015 Silverado's come from the factory with either an cast aluminum or cast iron steering knuckles (spindles).
(2015 Only)

Note-If your Silverado has the cast iron knuckles use the 2007 - 2014 parts.



Cast Iron

Silverado / Sierra 2015 w/ Cast Aluminum Spindle

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2510-2/3 Works on 4WD's!	CS2007F-2	RK2507-3	Factory / 2200
2"Front / 4" Rear	DJM2510-2/4 Works on 4WD's!	CS2007F-2	RK2507-4	Factory / 2200
2" Front / 3" Rear	DJM2515-2/3 Works on 4WD's!	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	RK2507-3	Factory / 2200
2" Front / 4" Rear	DJM2515-2/4 Works on 4WD's!	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	RK2507-4	Factory / 2100
3" Front / 4" Rear	DJM2515-3/4	CA2515-3 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-4	Factory / 2100
3"Front / 5" Rear	DJM2515-3/5	CA2515-3 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-5	Factory / 2000
4" Front / 6" Rear	DJM2515-4/6	CA2515-4 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-6	Factory / 1900
4" Front / 7" Rear	DJM2515-4/7	CA2515-4 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-7	Factory / 1800

Silverado / Sierra 2016 - 2018

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2510-2/3 Works on 4WD's!	CS2007F-2	RK2507-3	Factory / 2200
2"Front / 4" Rear	DJM2510-2/4 Works on 4WD's!	CS2007F-2	RK2507-4	Factory / 2200
2" Front / 3" Rear	DJM2515-2/3 Works on 4WD's!	CA2515L-2 * Ball Joint # 6015-Low Bushing Kit # BK2007L	RK2507-3	Factory / 2200

CHEVY

Silverado 2019

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 6" Rear	DJM2519-3/6	CA2019-3	FK2019-C	Factory / 1800 / 2200
4"Front / 6" Rear	DJM2519-4/6	CA2019-4	FK2019-C	Factory / 1800 / 2200



CHEVY

Silverado / Sierra 2016 - 2018

2" Front / 4" Rear	DJM2515-2/4 Works on 4WD's!	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	RK2507-4	Factory / 2100
3" Front / 4" Rear	DJM2515-3/4	CA2515-3 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-4	Factory / 2100
3" Front / 5" Rear	DJM2515-3/5	CA2515-3 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-5	Factory / 2000
4" Front / 6" Rear	DJM2515-4/6	CA2515-4 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2507U	RK2507-6	Factory / 1900
4" Front / 7" Rear	DJM2515-4/7	CA2515-4 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2507-7	Factory / 1800

Suburban 1992 - 1999

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2329-2/3	CS2351-3	HS1129-3	1315 / 2100
2" Front / 3" Rear	DJM2029-2/3	DS2056-2	HS1129-3	1415 / 2100
4" Front / 5" Rear	DJM1028-4/5	DS2056-2 CS2351-2	FK1028-5	1315 / 1800 + 2000

Suburban 2000 - 2006 2WD & 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	DJM2000-0/2	NA	CS2000R-2 SE2000	Factory / Factory
3" Front / 3" Rear	DJM2000-3/3	CA2001L-3D CA2001L-3P * Ball Joint # 6541 Bushing Kit # BK2001L	CS2000R-3 RK2000	1315 / 2000
3" Front / 5" Rear	DJM2000-3/5	CA2001L-3D CA2001L-3P * Ball Joint # 6541 Bushing Kit # BK2001L	CS2000R-5 RK2000	1315 / 1800

CHEVY

Suburban 2007 - 2014

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory / Factory
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / Factory
2" Front / 3" Rear	DJM2007-2/3	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	CS2007R-3 RK2007	Factory / 2200
2" Front / 4" Rear	DJM2017-2/4	CS2007F-2	RK2007-4	Factory / 2200
2" Front / 4" Rear	DJM2007-2/4	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	RK2007-4	Factory / 2200
3" Front / 4" Rear	DJM2007-3/4	CA2007-3 * Ball Joint # 6541-Low 6124-Upp Bushing Kit # BK2007L BK2007U	RK2007-4	Factory / 2200

Cast
Aluminum



The 2015 Suburban's come from the factory with either an cast aluminum or cast iron steering knuckles (spindles).
Note-If your Suburban has the cast iron knuckles use the 2007 - 2014 parts.
Note-If your Suburban has the Aluminum knuckles use the 2015 parts



Cast Iron

Suburban 2015 - 2018

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory / Factory
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2200
2" Front / 4" Rear	DJM2017-2/4	CS2007F-2	RK2007-4	Factory / 2200
2" Front / 3" Rear	DJM2015-2/3	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	CS2007R-3 RK2007	Factory / 2200
2" Front / 4" Rear	DJM2015-2/4	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	RK2007-4	Factory / 2200
3" Front / 4" Rear	DJM2015-3/4	CA2515-3 * Ball Joint # 6015-Low 6292-Upp Bushing Kit # BK2007L BK2007U	RK2007-4	Factory / 2200

CHEVY

Tahoe / Sierra 1995 - 1999

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SH1011-2	1415 / 2200
2" Front / 2" Rear	DJM2351-2/2	CS2351-2	SH1011-2	1315 / 2200
2" Front / 2" Rear	DJM2555-2/2	CA2555L-2 * Ball Joint # 6293 Bushing Kit # BK2555L	SH1011-2	1415 / 2200
2" Front / 2" Rear	DJM2056-2/2	DS2056-2	SH1011-2	1415 / 2200
2" Front / 3" Rear	DJM2329-2/3 (4 Door Only)	CS2351-2	HS1129-3	1315 / 2200
2" Front / 3" Rear	DJM2029-2/3 (4 Door Only)	DS2056-2	HS1129-3	1415 / 2200
3" Front / 3" Rear	DJM2329-3/3 (4 Door Only)	CS2351-3	HS1129-3	1315 / 2200
3" Front / 3" Rear	DJM2529-3/3 (4 Door Only)	CA2555L-3 * Ball Joint # 6293 Bushing Kit # BK2555L	HS1129-3	1415 / 2200
4" Front / 4" Rear	DJM1029-2D (2 Door Only)	DS2056-2 CS2351-2	FK1029-2D (2 Door)	1315 / 1700 + 1800
4" Front / 4" Rear	DJM1029-4D (4 Door Only)	DS2056-2 CS2351-2	FK1029-4D (4 Door)	1315 / 1700 + 1800

Tahoe / Yukon 2000 - 2006 2WD / 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	DJM2000-0/2	NA	CS2000R-2 SE2000	Factory / Factory
3" Front / 3" Rear	DJM2000-3/3	CA2001L-3D CA2001L-3P * Ball Joint # 6541L Bushing Kit # BK2001L	CS2000R-3 RK2000	1315 / 2000
3" Front / 3" Rear	DJM2000-3/3+	CA2001L-3D CA2001L-3P CA2000U * Ball Joint # 6541-Low 6124-Upp Bushing Kit # BK2000U BK2001L	CS2000R-3 RK2000	1315 / 2000

CHEVY

Tahoe / Yukon 2007 - 2014 2WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM2017-2/2	CS2007F-2	CS2007R-2 SE2007	Factory / Factory
2" Front / 3" Rear	DJM2007-2/3	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	CS2007R-3 RK2007	Factory / 2000
2" Front / 4" Rear	DJM2007-2/4	CA2007L-2 * Ball Joint # 6541 Bushing Kit # BK2007L	RK2007-4	Factory / 2000
3" Front / 4" Rear	DJM2007-3/4	CA2007-3 * Ball Joint # Upper 6124 Lower 6541 Bushing Kit # Upper BK2007U Lower BK2007L	RK2007-4	Factory / 2000

Tahoe / Yukon 2007 - 2014 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2000

Cast
Aluminum



The 2015 Tahoe's come from the factory with either an cast aluminum or cast iron steering knuckles (spindles).
Note-If your Tahoe has the cast iron knuckles use the 2007 - 2014 parts.
Note-If your has the Aluminum knuckles use the 2015 parts



Cast Iron

Tahoe / Yukon 2015 - 2018 2WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2015-2/3	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	CS2007R-3 RK2007	Factory / 2000
2" Front / 4" Rear	DJM2015-2/4	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	RK2007-4	Factory / 2000
3" Front / 3" Rear	DJM2015-3/4	CA2515-3 * Ball Joint # 6015-Low 6292- Upp Bushing Kit # BK2007L BK2507U	RK2007-4	Factory / 2000

CHEVY

Tahoe / Yukon 2015 - 2018 4WD

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2017-2/3	CS2007F-2	CS2007R-3 RK2007	Factory / 2000
2" Front / 4" Rear	DJM2017-2/4	CS2007F-2	RK2007-4	Factory / 2000
2" Front / 3" Rear	DJM2015-2/3	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	CS2007R-3 RK2007	Factory / 2000
2" Front / 4" Rear	DJM2015-2/4	CA2515L-2 * Ball Joint # 6015 Bushing Kit # BK2007L	RK2007-4	Factory / 2000

Trailblazer / Envoy 2000 - 2011

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front Only	NA	K2301-F	NA	Factory /Factory
2" Front / 3" Rear	DJM2301-2/4	K2301-F	CS2301R-4	Factory / 1800



**Now available
for the 2000-2011
Trailblazer Super Sport!
Parts made before 2020
may not work with the SS model.**



Articulation End Links

*line up your endlinks right Lorem
ipsum dolor sit amet, consectetur
adipiscing elit, sed do eiusmod
tempor incididunt ut labore et dolo-
re magna aliqua*

FORD



It was 1965 when Ford announced their "Twin I-Beam Suspension" and we have been building our "Dream Beams" to lower these trucks for over twenty years! Our King Pin I-Beams are the most popular on the market. Twin I-Beams are still in production today in the SuperDuty series. Fords have evolved over the years from I-Beams to the modern upper and lower control-arm suspensions, we've been here building lowering kits all along providing more choice for you the customizing enthusiasts.



#1



#2

Here's an important tip you need to know - Ford used a couple of different mounting ends on the shocks on F-100's from 65-79.

#1 - A loop mount with bushings on both ends of the shock

#2 - A loop mount with a bushing on the bottom mount with a threaded stem on top.

Front - If you have style #1 use shock part number 1409

If you have style #2 use shock number 1415

Rear - If you have style #1 use shock number 1900

If you have style #2 use shock number 1910

FORD

F-100 1965 - 1972 King Pin Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM3004-3/4	DB3004-3 Use OEM King Pin Kits or MOOG # 8524B	HS1130-4	See Below!

F-100 1973 - 1979 King Pin Trucks

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM3004A-3/4	DB3004-3 Use OEM King Pin Kits or MOOG # 8540B	HS1123-4	See Above!

F-150 1983 - 1986 Ball joints mounted in Beams

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM3003-3/4	DB3003-3 Use OEM ball joints	HS1123-4	1415 / 2000
3" Front / 5" Rear	DJM3003-3/5	DB3003-3 Use OEM ball joints	FK3000-5	1415 / 1900

F-150 1987 - 1996 Ball joints mounted in Spindles

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM3000-3/4	DB3000-3 Use OEM ball joints	HS1123-4	1415 / 2000
3" Front / 5" Rear	DJM3000-3/5	DB3000-3 Use OEM ball joints	FK3000-5	1415 / 1900

F-150 1997 - 2003

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM3097-2/4	CS3097-2	HS3097-4	1415 / 2015
4" Front / 6" Rear	DJM3097-4/6	CA3097L-4 CA3097U CS3097-2 * Ball Joint # 6370- Upp 8695T-Low Bushing Kit # BK3097L BK3097U	FK3097-6	1415 / 1910

FORD

Beginning in 2004 Ford went from the traditional coil spring set up to a "Strut" type front suspension. This means your shock is in a tube (strut) with the coil spring mounted to the strut. It is removed as a one complete unit. We redesigned our control arms to lower without any modification to the strut. Installation is easy and you won't suffer from alignment or wheel clearance issues!

F-150 2004 - 2008

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM3205-2/4	CA3205L-2D CA3205L-2P * Ball Joint # 8695T Bushing Kit # BK3205L	RK3204-4	Factory / 2200
3" Front / 5" Rear	DJM3205-3/5	CA3205L-3D CA3205L-3P * Ball Joint # 8695T Bushing Kit # BK3205L	RK3204-5	Factory / 2200

F-150 2009 - 2013

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM3209-2/4	CA3209L-2D CA3209L-2P * Ball Joint # 8695T Bushing Kit # BK3205L	RK3209-4	Factory / 2200
3" Front / 5" Rear	DJM3209-3/5	CA3209L-3D CA3209L-3P * Ball Joint # 8695T Bushing Kit # BK3205L	RK3209-5	Factory / 2200

F-150 2014

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM3214-2/4	CA3214L-2D CA3214L-2P * Ball Joint # 8695T Bushing Kit # BK3214L	RK3209-4	Factory / 2200
3" Front / 5" Rear	DJM3214-3/5	CA3214L-3D CA3214L-3P * Ball Joint # 8695T Bushing Kit # BK3214L	RK3209-5	Factory / 2200

F-150 2015 - 2017

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 6" Rear	DJM3215-3/6	CA3215L-3D CA3215L-3P * Ball Joint # 6541 Bushing Kit # BK3215L	RK3215-6	Factory / 2200

FORD

F-250/F-350 1987 - 1998

Amount of Drop	Complete Kits	Front	Rear	Shocks
0" Front / 2" Rear	NA	NA	SH1015-2	1415 / 2200
3" Front / 4" Rear	DJM3005-3/4	DB3005-3	HS1135-4	1415 / 2000

F250/F-350 Superduty 1999 - 2007

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM3015-3/3	DB3015-3	EH3015-3	1415 / 2200
3" Front / 5" Rear	DJM3015-3/5	DB3015-3	HS3015-5	1415 / 2000

F250/F-350 Superduty 2008 - 2016

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 5" Rear	DJM3018-3/5	DB3015-3	RK3018	1415 / 2200

Excursion 1999 - 2002

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM3016-3/5	DB3015-3	HS3016-3	1415 / 2100

Expedition 1998 - 2002

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM3197-2/2	CS3097-2	CS3197R-2	1415 / 2000
4" Front / 4" Rear	DJM3197-4/4	CA3097L-2 CA3097U CS3097-2 * Ball Joint # 8695T-Low 6370-Upp Bushing Kit # BK3097L BK3097U	CS3197R-4	1415 / 1900

FORD

Ranger 1983 - 1988 *Ball Joints mounted in Beam*

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM3002-3/4	DB3002-3	FK3001-4	1415 / 1900

Ranger 1989 - 1997 *Ball Joints mounted in Spindle*

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 4" Rear	DJM3001-3/4	DB3001-3	FK3001-4	1415 / 1900

Ranger 1998 - 2010 *Drum Rear Brakes Only*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM3098-2/3	CS3098-2	FK3098-3	1315 / 1900 + 2000
4" Front / 5" Rear	DJM3098-4/5	CA3098L-4 CA3098U CS3098-2 * Ball Joint # 8695T-Low 8738-Upp Bushing Kit # BK3098L BK3098U	FK3098-5	1315 / 1800 + 1900

Ranger 2011 - 2014 *Disc Rear Brakes Only*

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM3010-2/3	CS3098-2	FK3010-3	1315 / 1900 + 2100
4" Front / 5" Rear	DJM3010-4/5	CA3098L-4 CA3098U CS3098-2 * Ball Joint # 8695T-Low 8738-Upp Bushing Kit # BK3098L BK3098U	FK3010-5	1315 / 1800 + 1900

DODGE

Dakota 1997 - 2002

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2397-2/3	CA2397L-2 * Ball Joint # 8413 Bushing Kit # BK2397L	SB2397-3	1315 / 1900
3" Front / 5" Rear	DJM2397-3/5	CA2397L-3 * Ball Joint # 8413 Bushing Kit # BK2397L	HS2397-5	1315 / 1900

Dakota RT 1997 - 2004

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 3" Rear	DJM2397RT-2/3	CA2397L-2 * Ball Joint # 8413 Bushing Kit # BK2397L	SB2397-3RT	1315 / 1900
3" Front / 3" Rear	DJM2397RT-3/3	CA2397L-3 * Ball Joint # 8413 Bushing Kit # BK2397L	SB2397-3RT	1315 / 1900

Durango 1999 - 2002 2WD Only

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 2" Rear	DJM2399-2/2	CA2397L-2 * Ball Joint # 8413 Bushing Kit # BK2397L	RK2399-2	1315 / 2400
3" Front / 3" Rear	DJM2399-3/3	CA2397L-3 * Ball Joint # 8413 Bushing Kit # BK2397L	RK2399	1315 / 2400

Ram 1500 2002 - 2005

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM2392-2/4	CS2392-2	FK2392-4	1315 / 2200 + 2400
2" Front / 4" Rear	DJM2392-2/4	CA2392L-2 * Ball Joint # 8695T Bushing Kit # BK2392L	FK2392-4	1415 / 2200 + 2400
3" Front / 5" Rear	DJM2392-3/5	CA2392L-3 * Ball Joint # 8695T Bushing Kit # BK2392L	FK2392-4	1415 / 2200 + 2400

Ram 1500 2006 - 2008

Amount of Drop	Complete Kits	Front	Rear	Shocks
2" Front / 4" Rear	DJM2306-2/4	CS2392-2	FK2392-4	1315 / 2200 + 2400

IMPORT



Toyota Pick Up 1988 - 1996

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM2855-3/3	CA2855L-3 Use OEM Ball Joint	LB3LK	1315 / 2000
3" Front / 4" Rear	DJM2855-3/4	CA2855L-3 Use OEM Ball Joint	LB4LK	1315 / 2000

Tacoma 1995 - 2004

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM2895-3/3	Complete Kit	LB3LK	1315 / 1900
3" Front / 4" Rear	DJM2895-3/4	Complete Kit	LB4LK	1315 / 1900
3" Front / 3" Rear	DJM2896-3/3	Complete Kit	SB3LK	1315 / 1900
3" Front / 4" Rear	DJM2896-3/4	Complete Kit	SB4LK	1315 / 1900

IMPORT

Tacoma 2005 - 2014 *Note: DJM2816 kits have ball joints installed (Retail Only)*

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM2806-3/3	CA2806-3 *Bushing Kit # BK2806L BK2806U	RK2806-3	Factory / 1910
3" Front / 4" Rear	DJM2806-3/4	CA2806-3 *Bushing Kit # BK2806L BK2806U	RK2806-4	Factory / 1910
3" Front / 3" Rear	DJM2816-3/3	CA2816-3 * Ball Joint # 80827-Low 80811-Upp Bushing Kit # BK2806L BK2806U	RK2806-3	Factory / 1910
3" Front / 4" Rear	DJM2816-3/4	CA2816-3 * Ball Joint # 80827-Low 80811-Upp Bushing Kit # BK2806L BK2806U	RK2806-4	Factory / 1910

Tundra 2007 - 2014 *Note: DJM2818 kits have ball joints installed (Retail Only)*

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 5" Rear	DJM2808-3/5	CA2808L-3 *Bushing Kit # BK2808	RK2808-5	Factory / 2215
3" Front / 5" Rear	DJM2818-3/5	CA2818L-3 * Ball Joint # K500228 Bushing Kit # BK2808L	RK2808-5	Factory / 2215

Note: Tacoma and Tundra Kits with ball joints installed are available for retail sales only.

Mazda Pick Up 1986 - 1993

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM2955-3/3	CA2955L-3	LB3LK	1315 / 2000
3" Front / 4" Rear	DJM2955-3/4	CA2955L-3	LB4LK	1315 / 2000

Nissan Hardbody 1986 1/2 - 1997

Amount of Drop	Complete Kits	Front	Rear	Shocks
3" Front / 3" Rear	DJM2755-3/3	CA2755L-3	LB3LK	1315 / 2000
3" Front / 4" Rear	DJM2755-3/4	CA2755L-3	LB4LK	1315 / 2000

DJM Individual Parts and Prices

DJM CALMAX Control Arms

CA2001L-3D	2000 - 2004 Chevy Suburban/Tahoe/Avalanche Lower Arms (drivers Side)	25lbs
CA2001L-3P	2000 - 2004 Chevy Suburban/Tahoe/Avalanche Lower Arms (passenger Side)	25lbs
CA2000U	2000 - 2004 Chevy Suburban/Tahoe/Avalanche Upper Control Arms	20lbs
CA2007-3	2007 - 2014 Chevy Tahoe/Silverado 3" Upper and Lower Control Arms	50lbs
CA2007L-2	2007 - 2014 Chevy Suburban/Tahoe/Silverado Lower Control Arms	40lbs
CA2301U	2001 - 2010 Chevy Trailblazer/Envoy Upper Control Arms	15lbs
CA2331L-3	1982 - 2001 Chevy S10/S15 3" Lower Control Arms	40lbs
CA2355L-3	1963 - 1970 C10 3" Lower Control Arms (drum brakes only)	50lbs
CA2355U	1963 - 1970 C10 Upper Control Arms (drum brakes only)	20lbs
CA2356L-3	1971 - 1987 C10 3" Lower Control Arms (disc brakes only)	50lbs
CA2356U	1971 - 1987 C10 Upper Control Arms (disc brakes only)	20lbs
CA2390L-4	2000 Dodge Ram 1500 Lower Control Arms	50lbs
CA2390U	2000 Dodge Ram 1500 Upper Control Arms	20lbs
CA2391L-4	1994 - 1999 Dodge Ram 1500 Lower Control Arms	50lbs
CA2391U	1994 - 1999 Dodge Ram 1500 Upper Control Arms	20lbs
CA2392L-2	2002 - 2005 Dodge Ram 1500 2" Lower Control Arms	50lbs
CA2392L-3	2002 - 2005 Dodge Ram 1500 3" Lower Control Arms	50lbs
CA2397L-2	1997 - 2002 Dodge Dakota/Durango 2" Lower Control Arms	40 lbs
CA2397L-3	1997 - 2002 Dodge Dakota/Durango 3" Lower Control Arms	40lbs
CA2400L-3	2004 - 2014 Chevy Colorado/Canyon 3" Lower Control Arms	35lbs
CA2507-4	2007 - 2014 Chevy Silverado 4" Upper and Lower Control Arms	50lbs
CA2515L-2	2015 Chevy Suburban/Tahoe/Silverado 2" Lower Control Arms (cast aluminum steering knuckle)	40lbs
CA2515-3	2015 Chevy Suburban/Tahoe/Silverado 3" Upper and Lower Control Arms (cast aluminum steering knuckle)	50lbs
CA2515-4	2015 Chevy Suburban/Tahoe/Silverado 3" Upper and Lower Control Arms (cast aluminum steering knuckle)	50lbs
CA2515U	2015 Chevy Suburban/Tahoe/Silverado Upper Control Arms (cast aluminum steering knuckle)	20lbs
CA2555L-2	1988 - 1998 Chevy C1500 2" Lower Control Arms	45lbs
CA2555L-3	1988 - 1998 Chevy C1500 3" Lower Control Arms	45lbs
CA2555L-4	1988 - 1998 Chevy C1500 Lower Control Arms	45lbs
CA2555U	1988 - 1998 Chevy C1500 Upper Control Arms	20lbs
CA2599L-2	1999 - 2006 Chevy Silverado 2" Lower Control Arms	45lbs
CA2599L-3	1999 - 2006 Chevy Silverado 3" Lower Control Arms	45lbs
CA2599L-4	1999 - 2006 Chevy Silverado 4" Lower Control Arms	45lbs
CA2599L-5	1999 - 2006 Chevy Silverado 5" Lower Control Arms	45lbs
CA2599U	1999 - 2006 Chevy Silverado Upper Control Arms	20lbs
CA2602L-3D	2001 - 2010 Chevy C2500/3500 HD 3" Lower Control Arms (drivers side)	25lbs
CA2602L-3P	2001 - 2010 Chevy C2500/3500 HD 3" Lower Control Arms (passenger side)	25lbs

DJM Individual Parts and Prices

CA2655L-3	1973 - 1991 Chevy C30 3" Lower Control Arms	50lbs
CA2655U	1973 - 1991 Chevy C30 3" Upper Control Arms	25lbs
CA2699L-6D	2001 - 2010 Chevy 1500/2500/3500 HD 6" Lower Control Arms (drivers side)	25lbs
CA2699L-3P	2001 - 2010 Chevy 1500/2500/3500 HD 6" Lower Control Arms (passenger side)	25lbs
CA2699U	2001 - 2010 Chevy 1500/2500/3500 HD Upper Control Arms	25lbs
CA2755L-3	1986 1/2 - 1996 Nissan Hardbody 3" Lower Control Arms	15lbs
CA2806-3	2005 - 2008 Toyota Tacoma 3" Upper and Lower Control Arms	40lbs
CA2808L-3	2007 - 2014 Toyota Tundra 3" Lower Control Arms	45lbs
CA2855L-3	1988 - 1996 Toyota Pick Up 3" Lower Control Arms	15lbs
CA2955L-3	1986 - 1994 Mazda Pick Up 3" Lower Control Arms	15lbs
CA3097L-4	1997 - 2002 Ford F150/Expedition Lower Control Arms	50lbs
CA3097U	1997 - 2002 Ford F150/Expedition Upper Control Arms	20lbs
CA3098L-4	1998 - 2014 Ford Ranger Lower Control Arms	50lbs
CA3098U	1998 - 2014 Ford Ranger Upper Control Arms	20lbs
CA3205L-2D	2004 - 2008 Ford F150 2" Lower Control Arms (drivers side)	25lbs
CA3205L-2P	2004 - 2008 Ford F150 2" Lower Control Arms (passenger side)	25lbs
CA3205L-3D	2004 - 2008 Ford F150 3" Lower Control Arms (drivers side)	25lbs
CA3205L-3P	2004 - 2008 Ford F150 3" Lower Control Arms (passenger side)	25lbs
CA3209L-2D	2009 - 2013 Ford F150 2" Lower Control Arms (drivers side)	25lbs
CA3209L-2P	2009 - 2013 Ford F150 2" Lower Control Arms (passenger side)	25lbs
CA3209L-3D	2009 - 2013 Ford F150 3" Lower Control Arms (drivers side)	25lbs
CA3209L-3P	2009 - 2013 Ford F150 3" Lower Control Arms (passenger side)	25lbs
CA3214L-2D	2014 Ford F150 2" Lower Control Arms (drivers side)	25lbs
CA3214L-2P	2014 Ford F150 2" Lower Control Arms (passenger side)	25lbs
CA3214L-3D	2014 Ford F150 3" Lower Control Arms (drivers side)	25lbs
CA3214L-3P	2014 Ford F150 3" Lower Control Arms (passenger side)	25lbs
CA3215L-3D	2015 Ford F150 3" Lower Control Arms (drivers side)	25lbs
CA3215L-3P	2015 Ford F150 3" Lower Control Arms (passenger side)	25lbs

DJM Drop Spindles

DS2031-2	1982 - 1998 Chevy S10/S15 2" Drop Spindles	40lbs
DS2045H-3	1973 - 1987 Chevy C10 3" Drop Spindles (1.25" brake rotor)	50lbs
DS2045L-3	1973 - 1987 Chevy C10 3" Drop Spindles (1.00" brake rotor)	50lbs
DS2055-2	1988 - 1991 Chevy C1500 2" Drop Spindles (Std. Cab Only)	45lbs
DS2056-2	1992 - 1998 Chevy C1500 2" Drop Spindles (Incl. 88-98 X-Cab)	45lbs
DS2057-3	1992 - 1999 Chevy C3500 3" Drop Spindles	55lbs

DJM Individual Parts and Prices

DJM Dream Beams

DB3000 -3	1987 - 1996 Ford F150 3" Dream Beams (ball joints mounted in spindle)	60lbs
DB3001-3	1989 - 1997 Ford Ranger 3" Dream Beams (ball joints mounted in spindles)	60lbs
DB3002-3	1983 - 1988 Ford Ranger 3" Dream Beams (ball joints mounted in beams)	60lbs
DB3003-3	1983 - 1986 Ford F150 3" Dream Beams (ball joints mounted in beams)	60lbs
DB3004-3	1965 - 1979 Ford F100 3" Dream Beams (king pins only)	70lbs
DB3005-3	1987 - 1998 Ford F250/350 3" Dream Beams	75lbs
DB3015-3	1994 - 2014 Ford F250/350 Superduty 3" Dream Beams	75lbs

DJM Coil Springs

CS2000R-2	2000 - 2015 Chevy Suburban/Tahoe 2" Rear Lowering Springs	22lbs
CS2000R-3	2000 - 2015 Chevy Suburban/Tahoe 3" Rear Lowering Springs	25lbs
CS2000R-5	2000 - 2015 Chevy Suburban 5" Rear Lowering Springs	25lbs
CS2007-F	2007 - 2015 Chevy Suburban/Silverado/Tahoe 2" Rear Lowering Springs	20lbs
CS2321-1	1982 - 2001 Chevy S10/S15 1" Front Lowering Springs	27lbs
CS2321-2	1982 - 2001 Chevy S10/S15 2" Front Lowering Springs	27lbs
CS2321-3	1982 - 2001 Chevy S10/S15 3" Front Lowering Springs	27lbs
CS2351-2	1988 - 1998 Chevy C1500 2" Front Lowering Springs	30lbs
CS2351-3	1988 - 1998 Chevy C1500 3" Front Lowering Springs	30lbs
CS2352-2	1992 - 1999 Chevy C3500 2" Front Lowering Springs	30lbs
CS2353-2	1963 - 1987 Chevy C10 2" Front Lowering Springs	30lbs
CS2353-3	1963 - 1987 Chevy C10 3" Front Lowering Springs	30lbs
CS2354R-3	1963 - 1987 Chevy C10 3" Rear Lowering Springs	25lbs
CS2354R-4	1963 - 1987 Chevy C10 4" Rear Lowering Springs	25lbs
CS2371-2	1985 - 1999 Chevy Astro/Safari 2" Front Lowering Springs	25lbs
CS2391-2	1994 - 2000 Dodge Ram 1500 2" Front Lowering Springs	28lbs
CS2392-2	2002 - 2003 Dodge Ram 1500 2" Front Lowering Springs	30lbs
CS2400-2	2004 - 2014 Chevy Colorado/Canyon 2" Front Lowering Springs	18lbs
CS2599-2	1999 - 2006 Chevy Silverado 2" Front Lowering Springs	35lbs
CS3097-2	1997 - 2002 Ford F150/Expedition 2" Front Lowering Springs	34lbs
CS3098-2	1998 - 2014 Ford Ranger 2" Front Lowering Springs	30lbs
CS3197R-2	1997 - 2002 Ford Expedition 2" Rear Lowering Springs	22lbs
CS3197R-4	1997 - 2002 Ford Expedition 4" Rear Lowering Springs	22lbs

DJM Complete Flip Kits

FK1012-5	1970 - 1972 Chevy C10 5" Rear Axle Flip Kit	15lbs
FK1024-5	1973 - 1987 Chevy C10 5" Rear Axle Flip Kit	10lbs

DJM Individual Parts and Prices

FK1024-LTD	1973 - 1987 Chevy C10 5" Rear Axle Flip Kit (with u-bolts & spring plates)	15lbs
FK1025-6	1988 - 1998 Chevy C1500 6" Rear Axle Flip Kit	50lbs
FK1025-X	1988 - 1998 Chevy C1500 X-Cab 6" Rear Axle Flip Kit	50lbs
FK1026-7	1992 - 1999 Chevy C3500 7" Rear Axle Flip Kit	55lbs
FK1027-3	1985 - 1995 Chevy Astro/Safari 3" Rear Axle Flip Kit (composite leaf spring only)	25lbs
FK1027-97	1995 - 2000 Chevy Astro/Safari 3" Rear Axle Flip Kit (steel leaf spring only)	33lbs
FK1028-5	1993 - 1999 Chevy Suburban 5" Rear Axle Flip Kit	60lbs
FK1029-2D	1995 - 1999 Chevy Tahoe 2WD/2Door 4" Rear Axle Flip Kit	60lbs
FK1029-4D	1995 - 1999 Chevy Tahoe 2WD/4Door 4" Rear Axle Flip Kit	60lbs
FK1091-6	1994 - 2000 Dodge Ram 1500 6" Rear Axle Flip Kit	40lbs
FK2392-4	2002 - 2004 Dodge Ram 1500 4" Rear Axle Flip Kit	30lbs
FK2599-6	1999 - 2006 Chevy Silverado 6" rear Axle Flip Kit	50lbs
FK2599-6X	1999 - 2006 Chevy Silverado X-Cab 6" rear Axle Flip Kit	50lbs
FK2599-7	1999 - 2006 Chevy Silverado 7" rear Axle Flip Kit	50lbs
FK2599-7X	1999 - 2006 Chevy Silverado X-Cab 7" rear Axle Flip Kit	50lbs
FK2699-8	2001 - 2010 Chevy 1500/2500/3500 HD 8" Rear Axle Flip kit	60lbs
FK3000-5	1983 - 1996 Ford F150 5" Rear Axle Flip Kit	5lbs
FK3001-5	1983 - 1997 Ford Ranger 5" Rear Axle Flip Kit	5lbs
FK3097-6	1997 - 2002 Ford F150 6" Rear Axle Flip Kit	40lbs
FK3098-3	1998 - 2010 Ford Ranger 3" Rear Axle Flip Kit	15lbs
FK3098-5	1998 - 2010 Ford Ranger 5" Rear Axle Flip Kit	10lbs
FK3010-3	2011-2014 Ford Ranger 3" Rear Axle Flip Kit	10lbs
FK3010-5	2011-2014 Ford Ranger 5" Rear Axle Flip Kit	15lbs

DJM "Flip Only" Kits

FK-UAL	Universal Axle Flip (axle locator's only)	7lbs
FK1025-F	1988 - 1998 Chevy C1500 Flip Only (no c-sections)	25lbs
FK1026-F	1992 - 1999 Chevy C2500/3500 8-Lug Flip Only (no c-sections)	25lbs
FK1028-F	1995 - 1999 Chevy Suburban/Tahoe Flip Only (no c-sections)	25lbs
FK1091-F	1994 - 2000 Dodge Ram 1500 Flip Kit Only (no c-sections)	25lbs
FK2392-F	2002 - 2005 Dodge Ram 1500 Flip Kit Only (no c-sections)	25lbs
FK2599-F	1999 - 2006 Chevy Silverado Flip Only (no c-sections)	25lbs
FK2699-F	2001 - 2010 Chevy 1500/2500/3500 HD Flip Only (no-sections)	25lbs
FK30097-F	1997 - 2002 Ford F150 Flip Only (no c-sections)	25lbs

DJM Individual Parts and Prices

DJM Flip Kit C-Section Only Kits

FK1025-C	1988 - 1998 Chevy C1500 Frame Supports (c-sections only)	20lbs
FK1028-C	1992 - 1999 Chevy Suburban Frame Supports (c-sections only)	20lbs
FK1091-C	1994 - 2000 Dodge Ram 1500 Frame Supports (c-sections only)	20lbs
FK2397-C	1997 - 2002 Dodge Dakota Frame Supports (c-sections only)	15lbs
Fk2599-C	1999 - 2006 Chevy Silverado Frame Supports (c-sections only)	20lbs
FK2699-C	2001 - 2010 Chevy 1500/2500/3500 HD Frame Supports (c-sections only)	25lbs
FK3097-C	1997 - 2002 Ford F150 Frame Supports (c-sections only)	20lbs
FK3098-C	1998 - 2014 Ford Ranger Frame Supports (c-sections only)	15lbs

DJM Leaf Spring Eye Hanger Kits

EH1019-2	1973 - 1991 Chevy C30 2" Leaf Spring lowering eye hangers	15lbs
EH1020-2	1973 - 1991 Chevy C10 2" Leaf Spring lowering eye hangers	15lbs
EH1021-2	1988 - 1998 Chevy C1500 2" Leaf Spring lowering eye hangers	12lbs
EH1022-2	1992 - 1998 Chevy C3500 2" Leaf Spring lowering eye hangers	15lbs
EH1023-2	1973 - 1996 Ford F150 2" Leaf Spring lowering eye hangers	15lbs
EH1028	1996 - 1999 Chevy Tahoe/Suburban Leaf Spring LIFTING eye hangers	15lbs
EH1029-2	1996 - 1999 Chevy Tahoe 2" Leaf Spring lowering eye hangers	15lbs
EH1030-2	1965 - 1972 Ford F100 2" Leaf Spring lowering eye hangers	15lbs
EH1035-2	1973 - 1997 Ford F350 2" Leaf Spring lowering eye hangers	15lbs
EH1039-2	1994 - 2000 Dodge Ram 1500 2" Leaf Spring lowering eye hangers	15lbs
EH2397-2	1997 - 2002 Dodge Dakota 2" Leaf Spring lowering eye hangers	15lbs
EH2504-2	2002 - 2006 Chevy Silverado Long Bed Only 2" Leaf Spring lowering eye hangers	15lbs
EH2598-2	2002 - 2006 Chevy Silverado Long Bed Only 2" Leaf Spring lowering eye hangers	15lbs
EH2599-2	1999 - 2006 Chevy Silverado 2" Leaf Spring lowering eye hangers	15lbs
EH2601-2	2001 - 2010 Chevy 2500/3500 HD Long Bed 2" Leaf Spring lowering eye hangers	15lbs
EH2602-2	2001 - 2010 Chevy 1500 HD Long Bed Only 2" Leaf Spring lowering eye hangers	15lbs
EH2603-2	2001 - 2010 Chevy 2500/3500 HD Short Bed Only 2" Leaf Spring lowering eye hangers	15lbs
EH3015-3	1999 - 2004 Ford F350 Superduty 3" Leaf Spring lowering eye hangers	25lbs
EH3097-2	1997 - 2003 Ford F150 2" Leaf Spring lowering eye hangers	15lbs
EH3204	2004 - 2008 Ford F150 Leaf Spring LIFTING eye hangers	15lbs

Compete Hanger & Shackle Kits

HS1119-4	1973 - 1991 Chevy C30 4" Complete Hanger and Shackle Kit	20lbs
HS1120-4	1973 - 1987 Chevy C10 4" Complete Hanger and Shackle Kit	20lbs
HS1121-4	1988 - 1998 Chevy C1500 4" Complete Hanger and Shackle Kit	20lbs

DJM Individual Parts and Prices

HS1122-4	1992 - 1998 Chevy C3500 4" Complete Hanger and Shackle Kit	20lbs
HS1123-4	1973 - 1996 Ford F150 4" Complete Hanger and Shackle Kit	20lbs
HS1129-3	1996 - 1999 Chevy Tahoe / Suburban 3" Complete Hanger and Shackle Kit	20lbs
HS1130-4	1965 - 1972 Ford F100 4" Complete Hanger and Shackle Kit	20lbs
HS1135-4	1973 - 1998 Ford F250/350 4" Complete Hanger and Shackle Kit	20lbs
HS1139-4	1994 - 2000 Dodge Ram 1500 4" Complete Hanger and Shackle Kit	20lbs
HS2397-5	1997 - 2002 Dodge Dakota 5" Complete Hanger and Shackle Kit	25lbs
HS2504-4	2002 - 2006 Chevy Silverado Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	20lbs
HS2504-4X	02 - 06 Chevy Silverado X-Cab Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	20lbs
HS2598-4	2002 - 2006 Chevy Silverado Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	20lbs
HS2598-4X	02 - 06 Chevy Silverado X-Cab Long Bed Only (Do Visual Check) 4" Complete Hanger and Shackle Kit	20lbs
HS2599-4	1999 - 2006 Chevy Silverado 4" Complete Hanger and Shackle Kit (Except 02 - 06 Long Bed, see above)	20lbs
HS2599-4X	1999 - 2006 Chevy Silverado X-Cab 4" Complete Hanger and Shackle Kit (Except 02 - 06 Long Bed, see above)	20lbs
HS2601 -5	2001 - 2010 Chevy 2500 / 3500 HD Short Bed Only 5" Complete Hanger and Shackle Kit	40lbs
HS2602-5	2001 - 2010 Chevy 1500 HD 5" Complete Hanger and Shackle Kit	40lbs
HS2603-5	2001 - 2010 Chevy 2500 / 3500 HD Long Bed Only 5" Complete Hanger and Shackle Kit	40lbs
HS2699-4	1992 - 1999 Chevy C3500 4" Complete Hanger and Shackle Kit	20lbs
HS3015-5	1999 - 2007 Ford F250/350 Superduty 5" Complete Hanger and Shackle Kit	35lbs
HS3016-3	1999 - 2004 Ford Excursion 3" Complete Hanger and Shackle Kit	35lbs
HS3097-4	1997 - 2002 Ford F150 4" Complete Hanger and Shackle Kit	20lbs

Shackles

SH1000	Lifting Shackles	5lbs
SH1009-2	1994 - 2000 Dodge Ram 1500 2" Rear Leaf Spring Shackle Kit	5lbs
SH1011-2	1988 - 1998 Chevy C1500/2500/3500 2" Rear Leaf Spring Shackle Kit	5lbs
SH10112-2	1973 - 1987 Chevy C10/C20/C30 2" Rear Leaf Spring Shackle Kit	5lbs
SH1012C-2	1968 - 1972 Chevy C10 (w/ 2 1/4" wide leaf) 2" Rear Leaf Spring Shackle Kit	5lbs
SH1014-2	1973 - 1996 Ford F150 2" Rear Leaf Spring Shackle Kit	5lbs
SH1015-2	1973 - 1996 Ford F350 2" Rear Leaf Spring Shackle Kit	5lbs
SH1016-2	1965 - 1972 Ford F100 2" Rear Leaf Spring Shackle Kit	5lbs
SH1092	2002 - 2003 Dodge 1500 Rear Leaf Spring Shackle Kit	5lbs
SH1099	1999 - 2006 Chevy Lifting Shackle	5lbs
SH2397-2	1997 - 2004 Dodge Dakota 2" Rear Leaf Spring Shackle Bracket Kit	5lbs
SH2507-2	2007 - 2015 Chevy Silverado 2" Rear Leaf Spring Shackle Kit	5lbs

DJM Individual Parts and Prices

SH2599-2	1999 - 2006 Chevy Silverado 2" Rear Leaf Spring Shackle Kit	5lbs
SH2601-2	2001 - 2010 Chevy 1500/2500/3500 HD 2" Rear Leaf Spring Shackle Kit	5lbs
SH3001-2	1983 - 1997 Ford Ranger 1.5" Rear Leaf Spring Shackle Kit	5lbs
SH3015-1	1999 - 2007 Ford F250/350 Superduty 1" Rear Leaf Spring Shackle Kit	5lbs
SH3016-1	2000 - 2002 Ford Excursion 1" Rear Leaf Spring Shackle Kit	5lbs
SH3097-2	1997 - 2002 Ford F150 2" Rear Leaf Spring Shackle Kit	5lbs
SH3200	2004 - 2008 Ford F150 Lifting Shackle Kit	5lbs
SH3204-2	2004 - 2014 Ford F150 2" Rear Leaf Spring Shackle Kit	5lbs
SH3215-2	2015 Ford F150 2" Rear Leaf Spring Shackle Kit	5lbs

Shock Extenders

SE1124	1973 - 1987 Chevy C10 Shock Extenders	5lbs
SE1125	1988 - 1998 Chevy C1500 Shock Extenders	5lbs
SE1128	1992 - 1999 Chevy Suburban / C3500 Shock Extenders	5lbs
SE1128S	1992 - 1999 Chevy Suburban / C3500 Shock Extenders (w/ factory rear swaybar)	5lbs
SE2000	2000 - 2004 Avalanche / Suburban / Tahoe Shock Extenders	5lbs
SE2007	2007 - 2015 Avalanche / Suburban / Tahoe Shock Extenders	5lbs
SE2599	1999 - 2006 Chevy Silverado Shock Extender	5lbs

Rear Kits

RK2000	2000 - 2006 Avalanche/Suburban/Tahoe Complete Rear Hardware Kit	15lbs
RK2007	2007 - 2015 Avalanche/Suburban/Tahoe Complete Rear Hardware Kit	15lbs
RK2007-4	2007 - 2015 Avalanche/Suburban/Tahoe Complete Rear Lowering Kit	40lbs
RK2099-4	2003 - 2006 Silverado Crew Cab (4dr) w/welded leaf spring eye hangers 4" Complete Rear Lowering Kit	40lbs
RK2099-5	2003 - 2006 Silverado Crew Cab (4dr) w/welded leaf spring eye hangers 5" Complete Rear Lowering Kit	40lbs
RK2397-6	1997 - 2002 Dodge Dakota 6" Complete Rear Lowering Kit	50lbs
RK2397-RT	1997 - 2003 Dodge Dakota RT 3" Complete Rear Lowering Kit	12lbs
RK2399	1997 - 2001 Dodge Durango 3" Complete Rear Lowering Kit	24lbs
RK2399-2	1997 - 2001 Dodge Durango 2" Complete Rear Lowering Kit	24lbs
RK2507-3	2007 - 2015 Chevy Silverado 3" Complete Rear Lowering Kit	35lbs
RK2507-4	2007 - 2015 Chevy Silverado 4" Complete Rear Lowering Kit	40lbs
RK2507-5	2007 - 2015 Chevy Silverado 5" Complete Rear Lowering Kit	40lbs
RK2507-6	2007 - 2015 Chevy Silverado 6" Complete Rear Lowering Kit	40lbs
RK2507-7	2007 - 2015 Chevy Silverado 7" Complete Rear Lowering Kit	35lbs
RK2806-3	2005 - 2007 Toyota Tacoma 3" Complete Rear Lowering Kit	35lbs
RK2808-5	2007 - 2014 Toyota Tundra 5" Complete Rear Lowering Kit	35lbs

DJM Individual Parts and Prices

RK3018	2008 - 2015 Ford Superduty 5" Complete Rear Lowering Kit	30lbs
RK3204-4	2004 - 2008 Ford F150 4" Complete Rear Lowering Kit	35lbs
RK3204-5	2004 - 2008 Ford F150 5" Complete Rear Lowering Kit	35lbs
RK3209-4	2009 - 2014 Ford F150 4" Complete Rear Lowering Kit	35lbs
RK3209-5	2009 - 2014 Ford F150 5" Complete Rear Lowering Kit	35lbs
RK3215-6	2015 Ford F150 6" Complete Rear Lowering Kit	35lbs

Pinion Shims

ACC-2PSK	2 Degree Pinion Shim Kit	3lbs
ACC-4PSK	4 Degree Pinion Shim Kit	3lbs
ACC-6PSK	6 Degree Pinion Shim Kit	3lbs
ACC-CBK	3/8" X 5" Leaf Spring Center Bolts	1lb
2PS	2 Degree Pinion Shim (Each)	1lb
4PS	4 Degree Pinion Shim (Each)	1lb
6PS	6 Degree Pinion Shim (Each)	1lb

Lowering Blocks

LB1023-3	1997 - 2001 S-10 3" Universal Block Kit w/ Steel Block Plates	10lbs
LB1023-4	1997 - 2001 S-10 4" Universal Block Kit w/ Steel Block Plates	10lbs
LB2LK	2" Universal Aluminum Lowering Block Kit (w/ u-bolts, nuts and washers)	8lbs
LB3LK	3" Universal Aluminum Lowering Block Kit (w/ u-bolts, nuts and washers)	10lbs
LB4LK	4" Universal Aluminum Lowering Block Kit (w/ u-bolts, nuts and washers)	10lbs
LB63Lk	1963 - 1972 Chevy C10 Coil Spring Rear Shim Kit	15lbs
SB1LK	1" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	15lbs
SB2LK	2" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	18lbs
SB3LK	3" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	19lbs
SB4LK	4" Universal Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	20lbs
SB2397-1	1997 - 2002 Dodge Dakota 1" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	15lbs
SB2397-1RT	1997 - 2002 Dodge Dakota RT 1" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	18lbs
SB2397-2	1997 - 2002 Dodge Dakota 2" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	20lbs
SB2397-2RT	1997 - 2002 Dodge Dakota RT 2" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	20lbs
SB2397-3	1997 - 2002 Dodge Dakota 3" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	22lbs
SB2397-3RT	1997 - 2002 Dodge Dakota RT 3" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	22lbs
SB2397-4	1997 - 2002 Dodge Dakota 4" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	23lbs
SB2397-4RT	1997 - 2002 Dodge Dakota RT 4" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	23lbs
SB2400-4	2004 - 2010 Chevy Colorado 3" Steel Lowering Block Kit (w/ u-bolts, nuts and washers)	23lbs

DJM Individual Parts and Prices

Shocks & Misc. Parts

Shocks (All)	CALMAX Supershocks	5lbs
10R	1 1/2" Urethane Bump Stops	1lb
10S	3/4" Urethane Bump Stops	1lb
CB15	1988 - 1998 Chevy C1500/2500/2500 Carrier Bearing Shim Kit	5lbs
CB31	1983 - 1996 Ford Ranger Carrier Bearing Shim Kit	5lbs
CB99	1999 - 2006 Chevy Silverado Carrier Bearing Shim Kit	2lbs
CM2391	1999 - 2000 Dodge 1500 Transmission Cross Member (Automatic trans)	15lbs
CM2699	2001 - 2010 Chevy 1500 / 2500 / 3500 HD Transmission Cross Member	25lbs
EL-01	Front Anti-Swaybar end link kit (for Calmax Control Arms)	1lb
EL-2000	2000 - 2015 Avalanche / Tahoe / Suburban Rear Anti-Swaybar end links	3lbs
TB2000A	2000 - 2006 Avalanche / Tahoe / Suburban Front Torsion Bar Keys	10lbs

Bushing Kits

BK2000L	Bushing and Sleeve Kit for CA2001L	1lb
BK2000U	Bushing and Sleeve Kit for CA2000U	1lb
BK2007L	Bushing and Sleeve Kit for CA2007L	1lb
BK2007U	Bushing and Sleeve Kit for CA2007U	1lb
BK2301U	Bushing and Sleeve Kit for CA2301U	1lb
BK2331L	Bushing and Sleeve Kit for CA2331L	1lb
BK2355L	Bushing and Sleeve Kit for CA2355L / CA2356L	1lb
BK2355U	Bushing and Sleeve Kit for CA2355U / CA2356U	1lb
BK2391L	Bushing and Sleeve Kit for CA2391L / CA2390L	1lb
BK2391U	Bushing and Sleeve Kit for CA2391U / CA2390U	1lb
BK2392L	Bushing and Sleeve Kit for CA2392L	1lb
BK2397L	Bushing and Sleeve Kit for CA2397L	1lb
BK2400L	Bushing and Sleeve Kit for CA2400L	1lb
BK2555L	Bushing and Sleeve Kit for CA2555L	1lb
BK2555U	Bushing and Sleeve Kit for CA2555U	1lb
BK2599L	Bushing and Sleeve Kit for CA2599L	1lb
BK2599U	Bushing and Sleeve Kit for CA2599U	1lb
BK2601L	Bushing and Sleeve Kit for CA2602L	1lb
BK2699L	Bushing and Sleeve Kit for CA2699L	1lb
BK2699U	Bushing and Sleeve Kit for CA2699U	1lb

DJM Individual Parts and Prices

<i>BK2806L</i>	<i>Bushing and Sleeve Kit for CA2806L</i>	<i>1lb</i>
<i>BK2806U</i>	<i>Bushing and Sleeve Kit for CA2806U</i>	<i>1lb</i>
<i>BK2808L</i>	<i>Bushing and Sleeve Kit for CA2808L</i>	<i>1lb</i>
<i>BK2895U</i>	<i>Bushing and Sleeve Kit for CA2895U</i>	<i>1lb</i>
<i>BK3000</i>	<i>Bushing and Sleeve Kit for Dream Beams</i>	<i>1lb</i>
<i>BK3004</i>	<i>Bushing and Sleeve Kit for King Pin Dream Beams</i>	<i>1lb</i>
<i>BK3097L</i>	<i>Bushing and Sleeve Kit for CA3097L</i>	<i>1lb</i>
<i>BK3097U</i>	<i>Bushing and Sleeve Kit for CA3097U</i>	<i>1lb</i>
<i>BK3098L</i>	<i>Bushing and Sleeve Kit for CA3098L</i>	<i>1lb</i>
<i>BK3098U</i>	<i>Bushing and Sleeve Kit for CA3098U</i>	<i>1lb</i>
<i>BK3205L</i>	<i>Bushing and Sleeve Kit for CA3205L / CA3209L</i>	<i>1lb</i>
<i>BK3214L</i>	<i>Bushing and Sleeve Kit for CA3214L</i>	<i>1lb</i>
<i>BK3215L</i>	<i>Bushing and Sleeve Kit for CA3215L</i>	<i>1lb</i>
<i>BK1011</i>	<i>Bushing and Sleeve Kit for Shackles</i>	<i>1lb</i>

LIMITED LIFETIME WARRANTY

DJM Suspension warranty extends to the original retail purchaser, that DJM products are free from defects in craftsmanship and materials for as long as the original retail purchaser owns the vehicle on which DJM products are installed. (Excluding ball joints and bushings which have a 90 day warranty).


KEEP YOUR INVOICE!

In the event of any warranty claim you must provide DJM with a copy of the original invoice.

This warranty does not apply to any product that has been modified, or subject to accident, abuse, or misuse. This warranty is limited to the repair or replacement, at DJM's discretion, of the defective product. Any cost of labor, freight incidental or consequential damages are expressly excluded from this warranty.

MERCHANDISE RETURNS

If it is necessary to return merchandise please use the following return procedures. Merchandise must be accompanied by a copy of the original invoice. You need to request an RGA (Returned Goods Authorization) number from DJM and place it on the outside of the box with the invoice copy in order to be accepted by the DJM warehouse. No returns after thirty (30) days. Refunds on current merchandise that is unused and in original cartons only. All returns are subject to restocking fee's. Shipping charges are non-refundable. Freight on all returns must be prepaid. Any C.O.D. or collect shipment, or any carton without an RGA # will be refused.

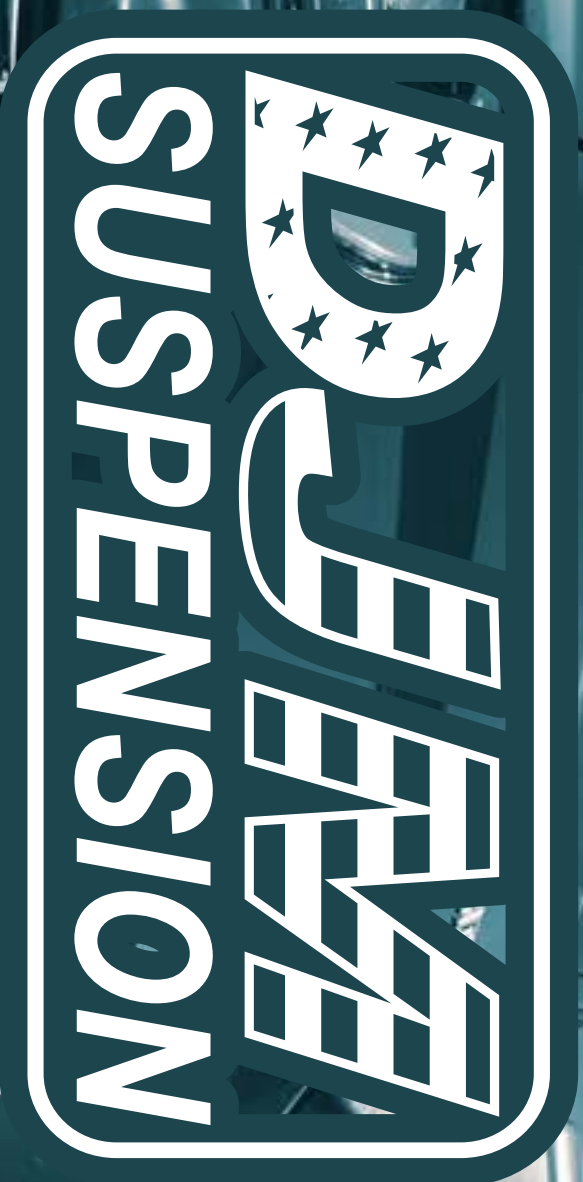

djmsuspension.com

***DJM parts are designed, fabricated and
packaged in Gardena Ca USA***