

PART # CA2301U

2001-2010 Trailblazer \ Envoy Front Kit INSTALLATION INSTRUCTIONS

Please take the time to read these **INSTALLATION INSTRUCTIONS** and check the **Hardware Parts List** to be sure you have all the listed parts.

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.


Please read the warranty information (blue page enclosed). Complete your **Product Warranty Card** and mail it to DJM Suspension.

Please take a few minutes to fill out your installation helper (back side of warranty). Accurate measurements **BEFORE BEGINNING INSTALLATION** will show any irregularities in your vehicle.

**NEVER WORK UNDER TRUCK SUPPORTED BY A JACK ONLY !!!
USE QUALITY JACK STANDS WHICH HAVE A RATING ADEQUATE FOR YOUR TRUCKS WEIGHT!!!**

INSTALLER MUST CHECK THAT THERE IS ABSOLUTELY NO CLEARANCE PROBLEMS BETWEEN THE WHEELS, THE SPINDLE, THE CALIPER, THE LOWER CONTROL ARMS AND ANY OTHER COMPONENT BEFORE DRIVING VEHICLE.

After preparing the upper arms, remove the factory upper arm. Clean the factory bolts and apply loctite. Install new upper arms with factory hardware adding 1-3/4" washers on the outside of the bushings. **DO NOT OVERTIGHTEN. TORQUE TO ABOUT 40 FT.LBS** release all grease fittings. Check bolts after first 500/1000 miles.

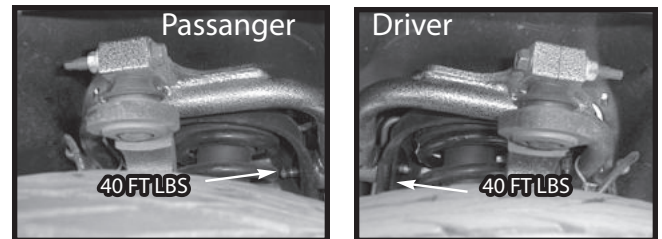

Install the grease fitting on the TWIN TUBE SLEEVES. Make sure to pregrease the sleeves to make sure the predrilled holes are free and the grease flows smoothly. Now install and align the arms to factory specifications.



Take for test drive.

TAKE YOUR TRUCK TO A QUALIFIED ALIGNMENT SHOP FOR A PROFESSIONAL ALIGNMENT. ALIGN TO FACTORY SPECS.



Hardware Parts List:

- 1-Upper control arm passanger
- 1-Upper control arm driver.
- 4- 1-3/4 x .062 Washers.
- 1- Bushings Kit. (Installed)
- 4 - Grease Fittings.

