




CA2007-3 and CA2507-4 2007-2015 Silverado 2 Wheel Drive Only

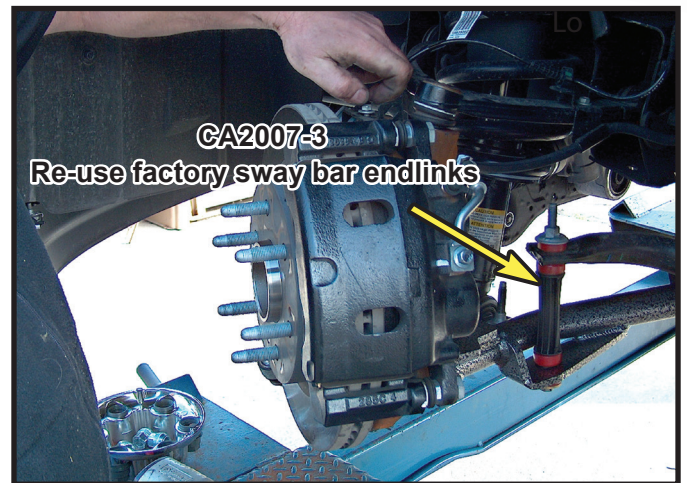

Install the grease fitting on the TWIN TUBE SLEEVES. Make sure to pregrease the sleeves to make sure the predrilled holes are free and the grease flows smoothly. If the ball joint is greaseable, grease it at this time. If it is maintenance free (no grease fitting) no action is necessary. Now install and align the arms to factory specifications

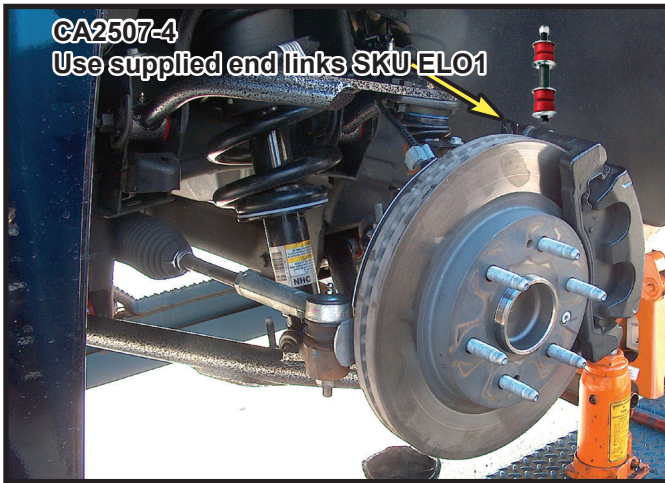

FOR MORE INFO
SCAN HERE

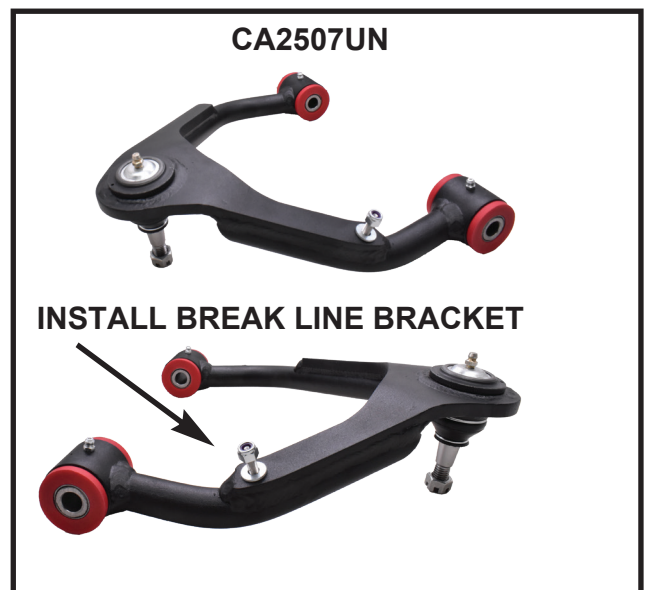

www.djmsuspension.com
580 West 184th Street Gardena Ca 90248
contact us:

tech@djmsuspension.com orders@djmsuspension.com

310-538-1583