


CA2000U 2000-2006 SUBURBAN / TAHOE

CA2599U 1999-2006 CHEVY 1500

UPPER CONTROL ARMS

INSTALLATION INSTRUCTIONS

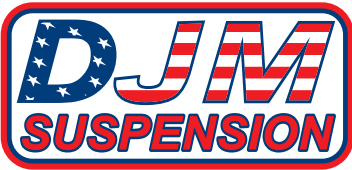

Please take the time to read these **INSTALLATION INSTRUCTIONS** and check the **Hardware Parts List** to be sure you have all the listed parts before beginning installation.

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.


CA2599U IS DESIGNED TO BE USED WITH THE DJM LOWER CONTROL ARM #CA2599L-4 OR CA2599L-5 AND CA2000U USED WITH CA2001L-3 USING THIS PART WITH ANY OTHER PRODUCT MAY VOID DJM'S WARRANTY!!

Hardware Parts List:

- 2- Upper Control Arms.
- 2- Ball Joints w/hardware(6124).
- 4- 1/2" Flat Washers.
- 8- Pivot Bushings.
- 4- Pivot Sleeves
- 4- Grease Fittings.
- 4- Zip Ties.

Install the grease fitting on the **TWIN TUBE SLEEVES**. Make sure to pre-grease the sleeves to make sure the predrilled holes are free and the grease flows smoothly. If the ball joint is greasable then grease it at this time. If it is maintenance free (no grease fitting) no action is necessary.

Now install and align the arms to factory specifications

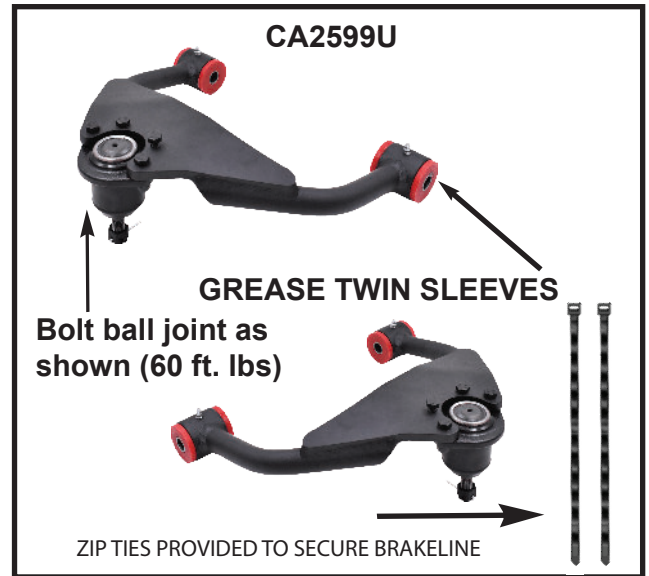

INSTALL GREASE FITTINGS FOR PREDRILLED TWIN SLEEVES AND BALL JOINT

