




# PART # CA2699U

## 2001-2010 CHEVY HD UPPER CONTROL ARMS INSTALLATION INSTRUCTIONS

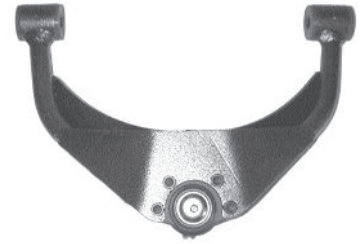

Please take the time to read these **INSTALLATION INSTRUCTIONS** and check the **Hardware Parts List** to be sure you have all the listed parts.

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.



### Hardware Parts List:

- 2- Upper Control Arms.
- 2- Ball Joints 6292
- 8- Pivot Bushings with twin tube sleeves (Installed)
- 4- Grease Fittings.
- 4- Zip Ties

**Both control arms are the same and can be installed on either side.**

Install the grease fitting on the **TWIN TUBE SLEEVES**. Make sure to pre-grease the sleeves to make sure the predrilled holes are free and the grease flows smoothly. If the ball joint is greasable then grease it at this time. If it is maintenance free (no grease fitting) no action is necessary.

Now install and align the arms to factory specifications

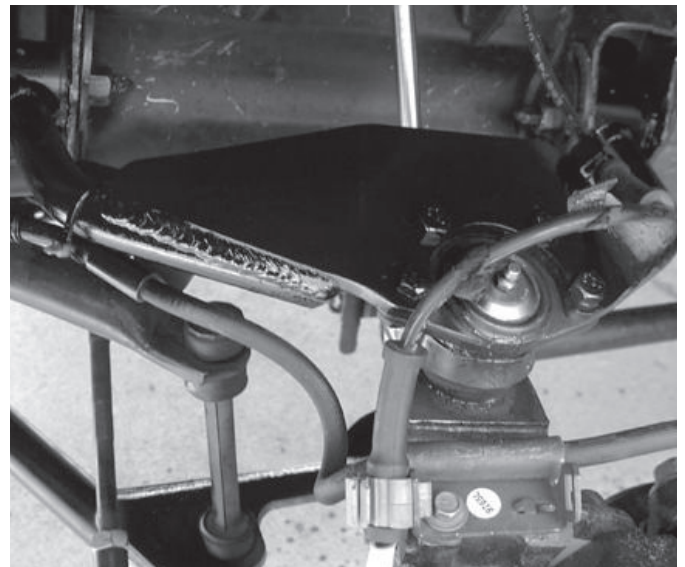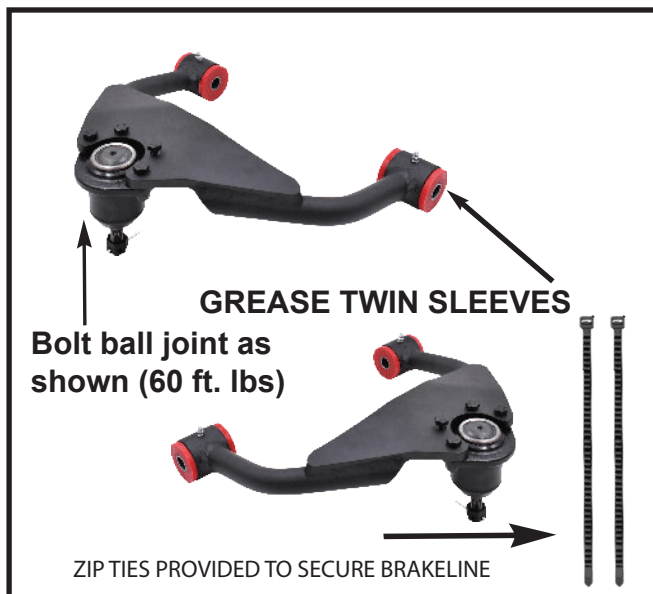

There are 2 small holes in the plate behind the ball joint. They are for the factory plastic rivet used to hold the ABS sensor.



The 4 larger holes are for the brake lines. Use the zip ties supplied to secure.