



PART # CA2555U (K6292 moog) 1988-1998 C1500 Silverado/Sierra CA2515U (K6292 djm) 2015-2018 Silverado/Sierra CA2519U (K6292 djm) 2019-2024 Silverado/Sierra 2599UXL (K6136)

1999 – 2006 CHEVY SILVERADO / SIERRA CUSTOM UPPER CONTROL ARMS (For Extreme Drops 5+ inches)

UPPER CONTROL ARMS INSTALLATION

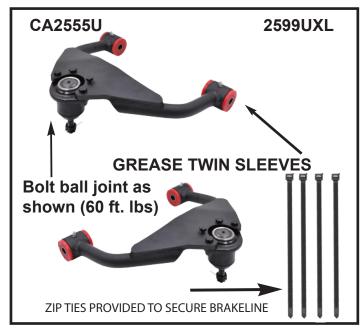

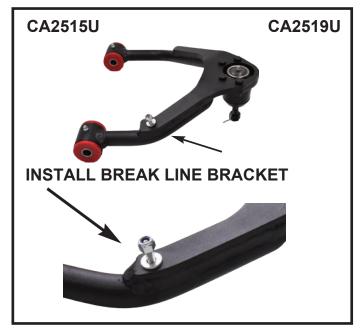

Install the grease fitting on the TWIN TUBE SLEEVES. Make sure to pregrease the sleeves to make sure the predrilled holes are free and the grease flows smoothly. If the ball joint is greaseable the grease it at this time if it is maintenance free (no grease fitting) no action is necessary. Now install and align the arms to factory specifications.

INSTALL GREASE FITTINGS FOR PREDRILLED TWIN SLEEVES AND BALL JOINT









On 2016-2018 steel knuckle only. There is a small burr on the upper ball joint tapper. This can be removed with a file or a die grinder. Test fit the upper ball joint to make sure there is no interferance.

www.djmsuspension.com 580 West 184th Street Gardena Ca 90248 contact us:

tech@djmsuspension.com

orders@djmsuspension.com